


ОСМ01ЕФ


(Устройство адиабатических
(теплоизоляционных) дверей шахты
центрального открывания)

Система дверей шахты

Демонстрация продукта в сборе (в этой инструкции не будет отображаться пылезащитный чехол на дверях шахты)

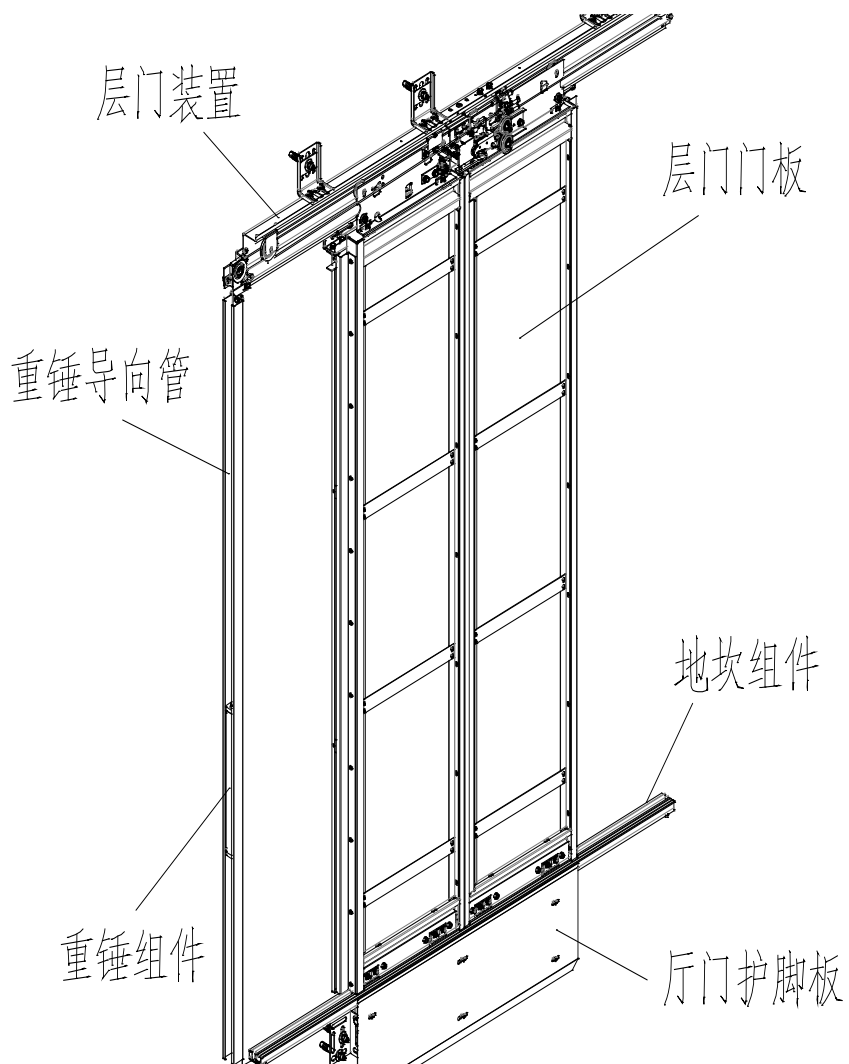


Установка порога:

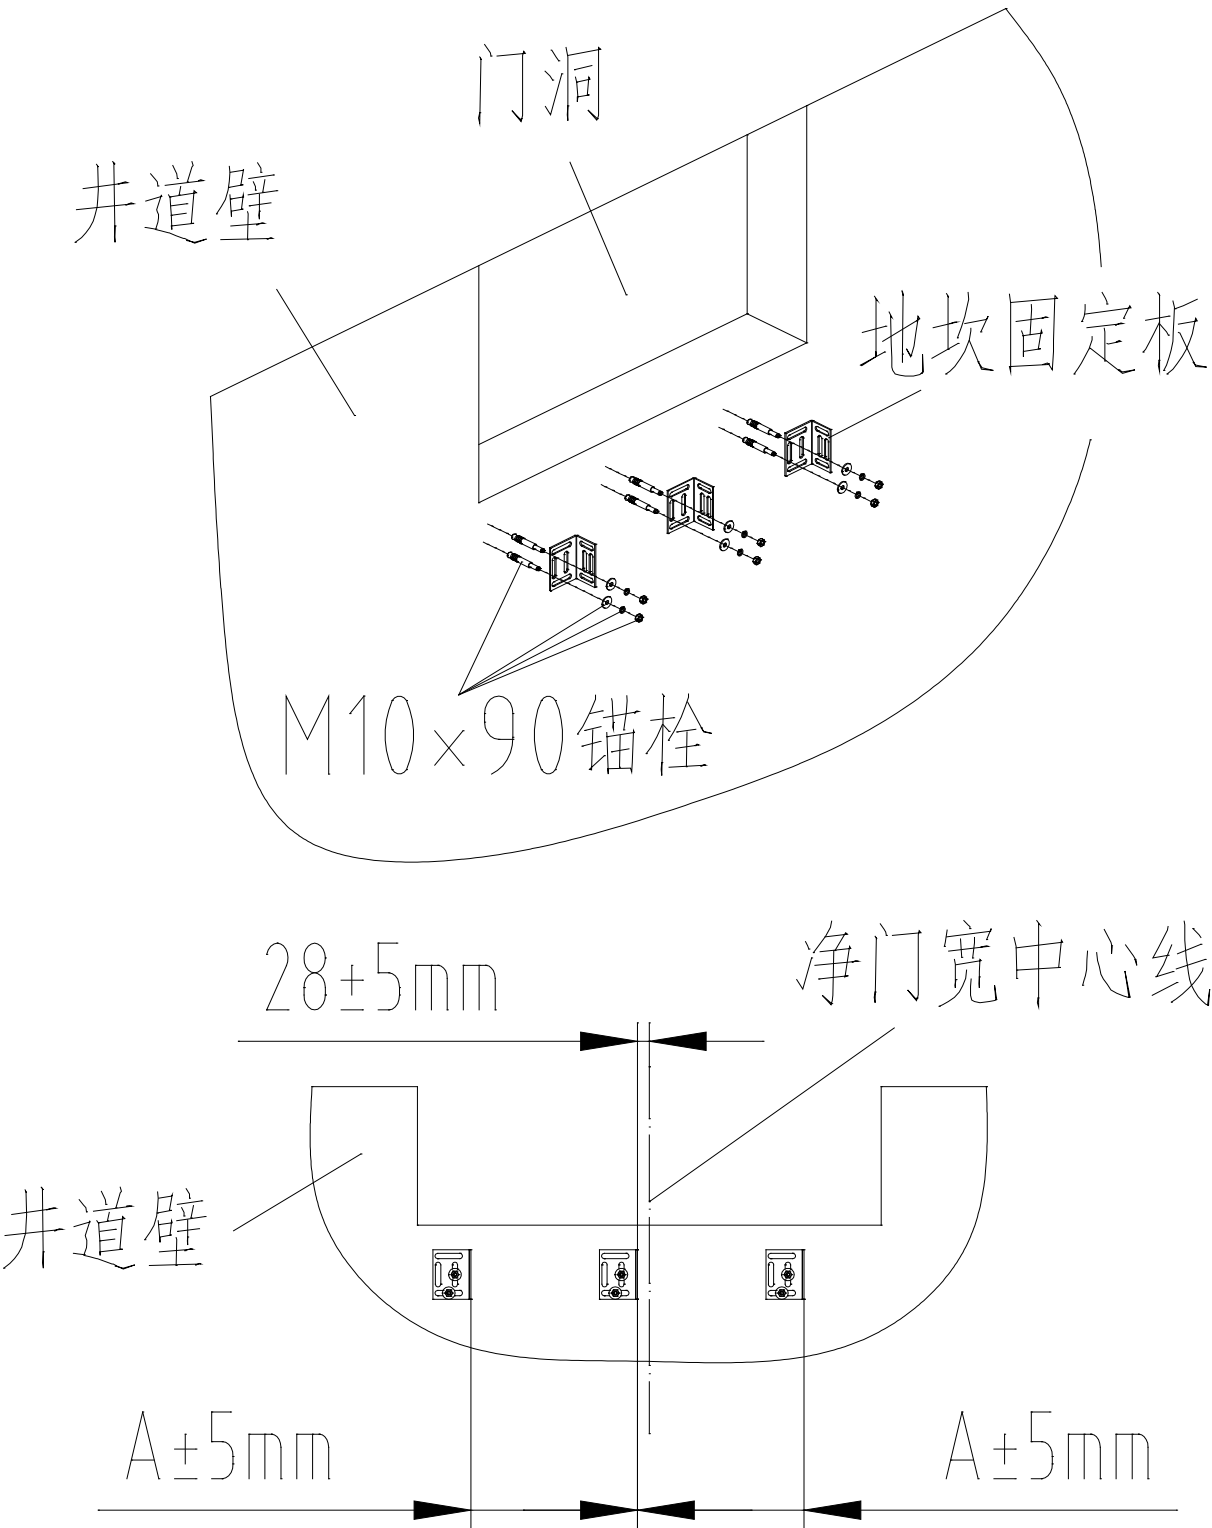


净开门J	650	700	750	800	850	900	950	1000	1050	1100	1150	1200
A	270	295	320	345	370	395	420	445	470	495	520	545


Инструкция по установке устройства противопожарных адиабатических
дверей шахты центрального открывания

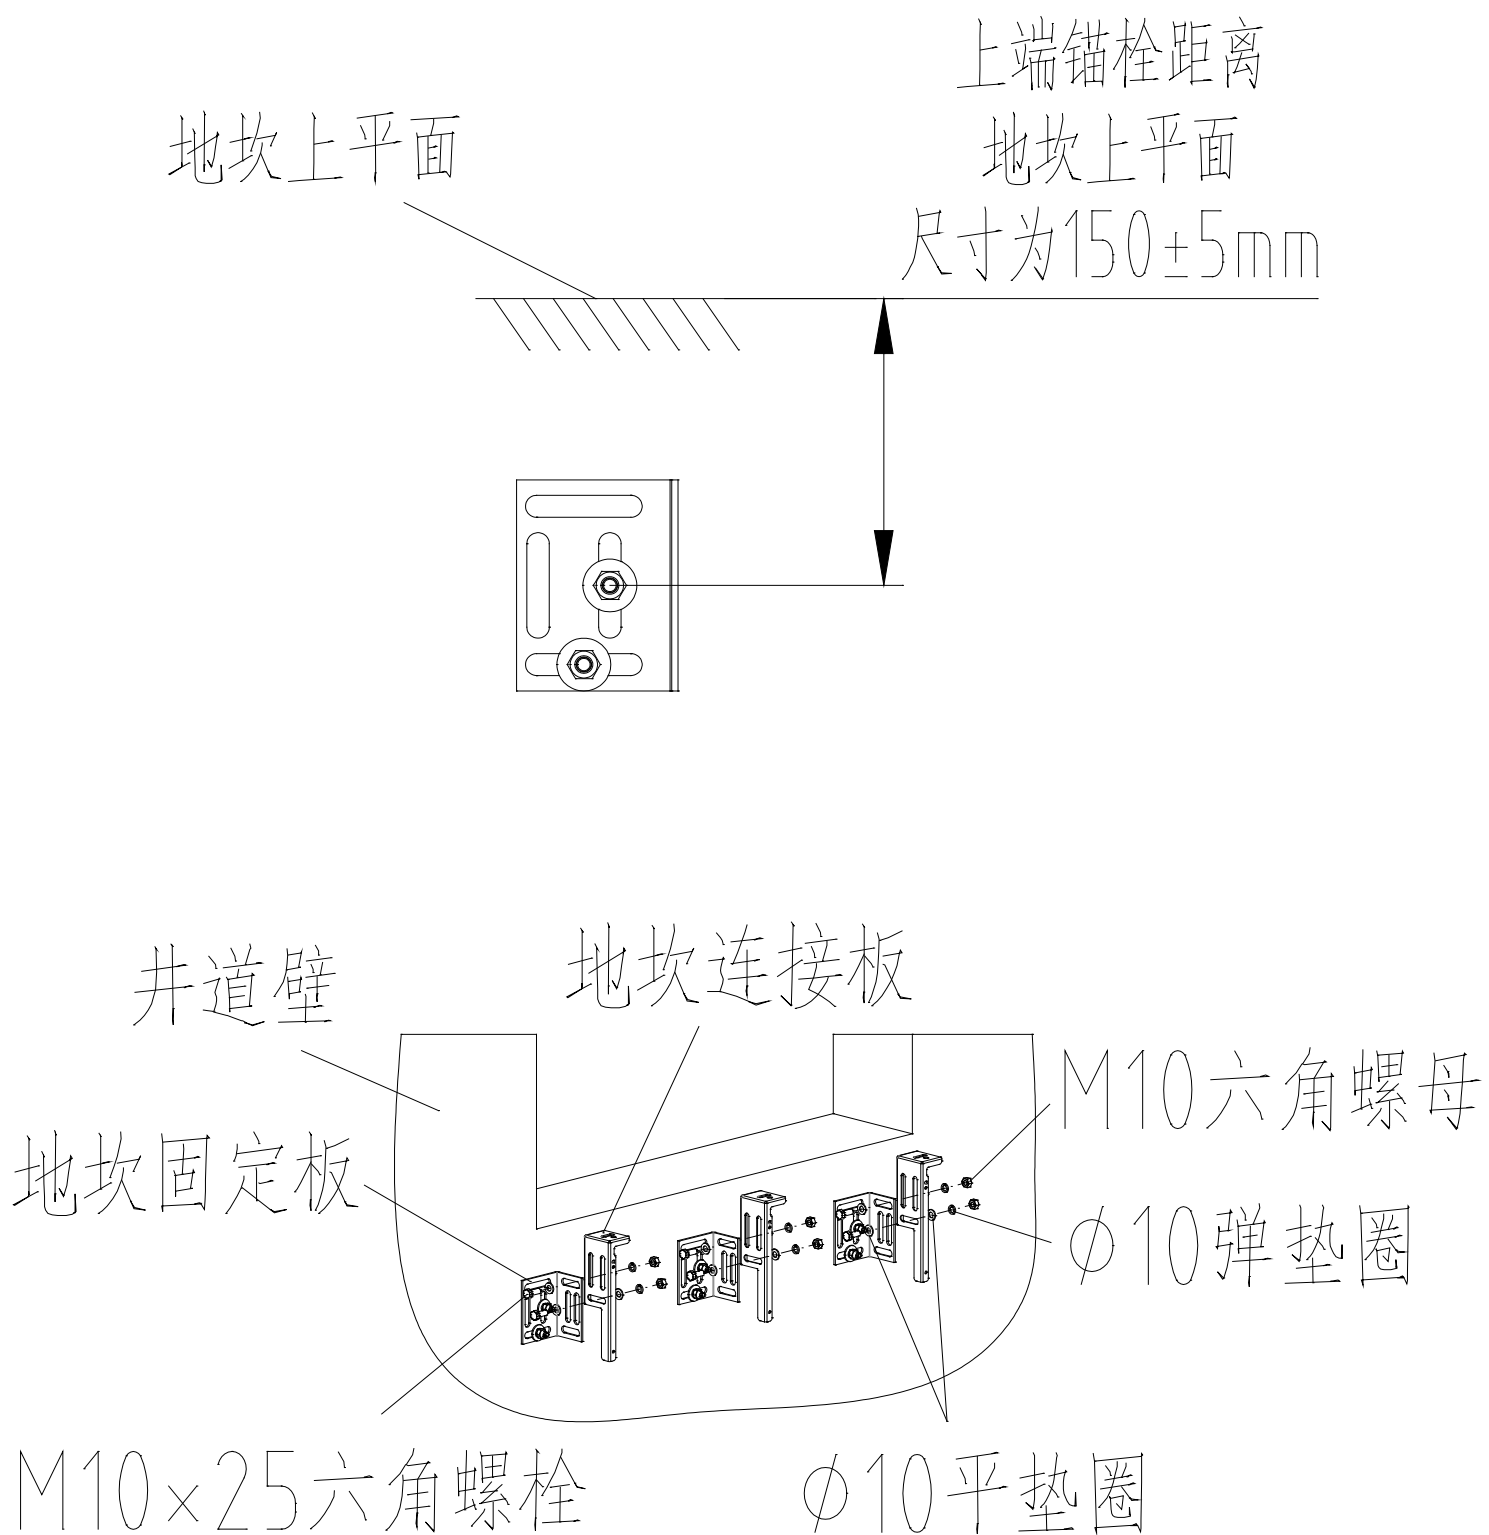

Инструкция по установке устройства противопожарных адиабатических дверей шахты центрального открывания

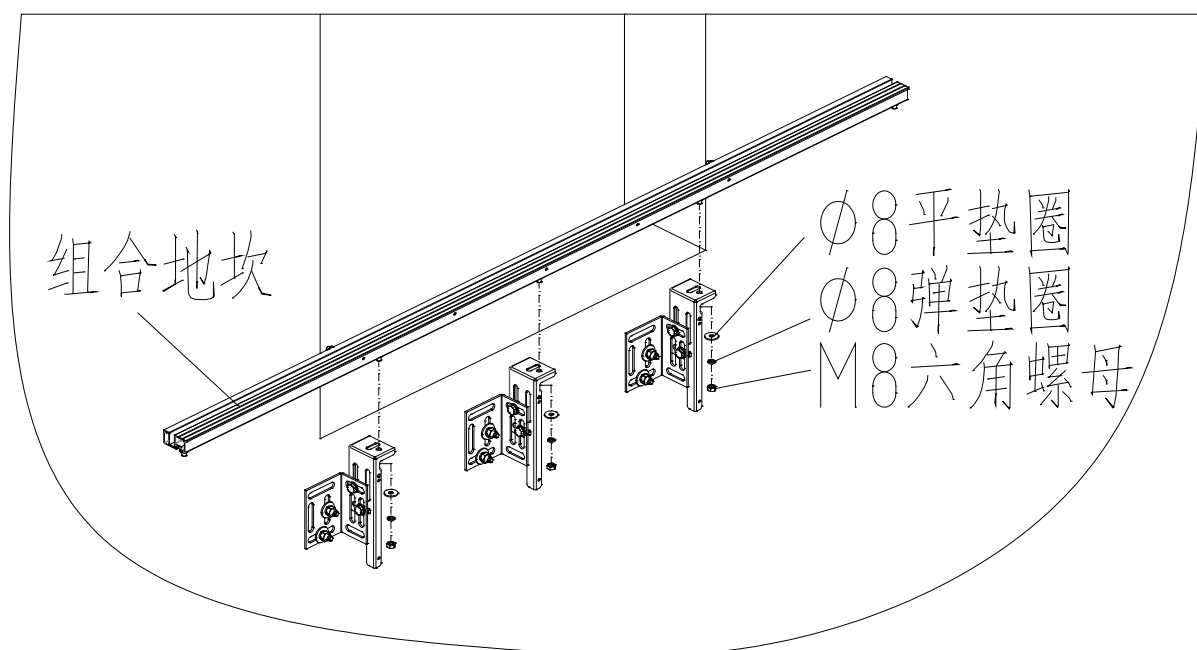


地坎上平面不能
低于地面装饰层
此面须用水平尺调平

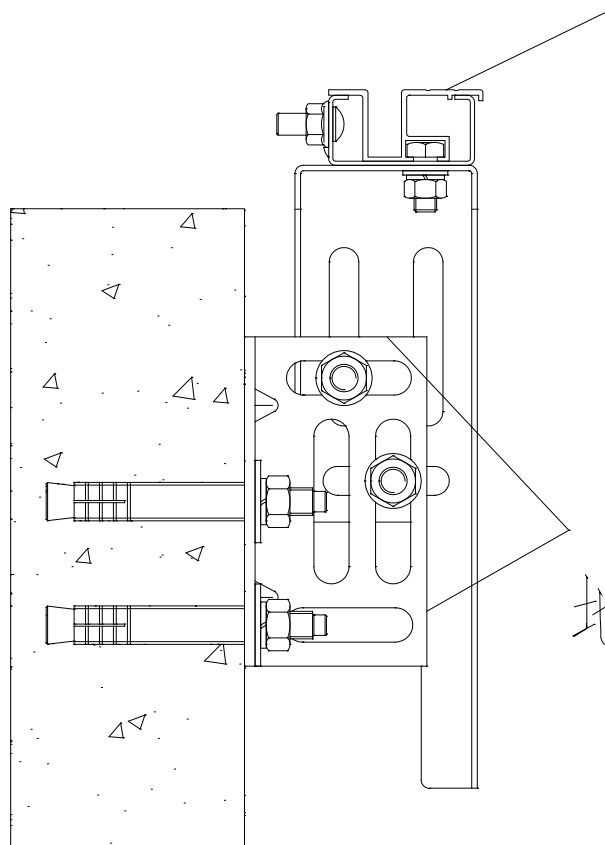


地坎安装好后
地坎支架须点焊加固

Установка фартука:

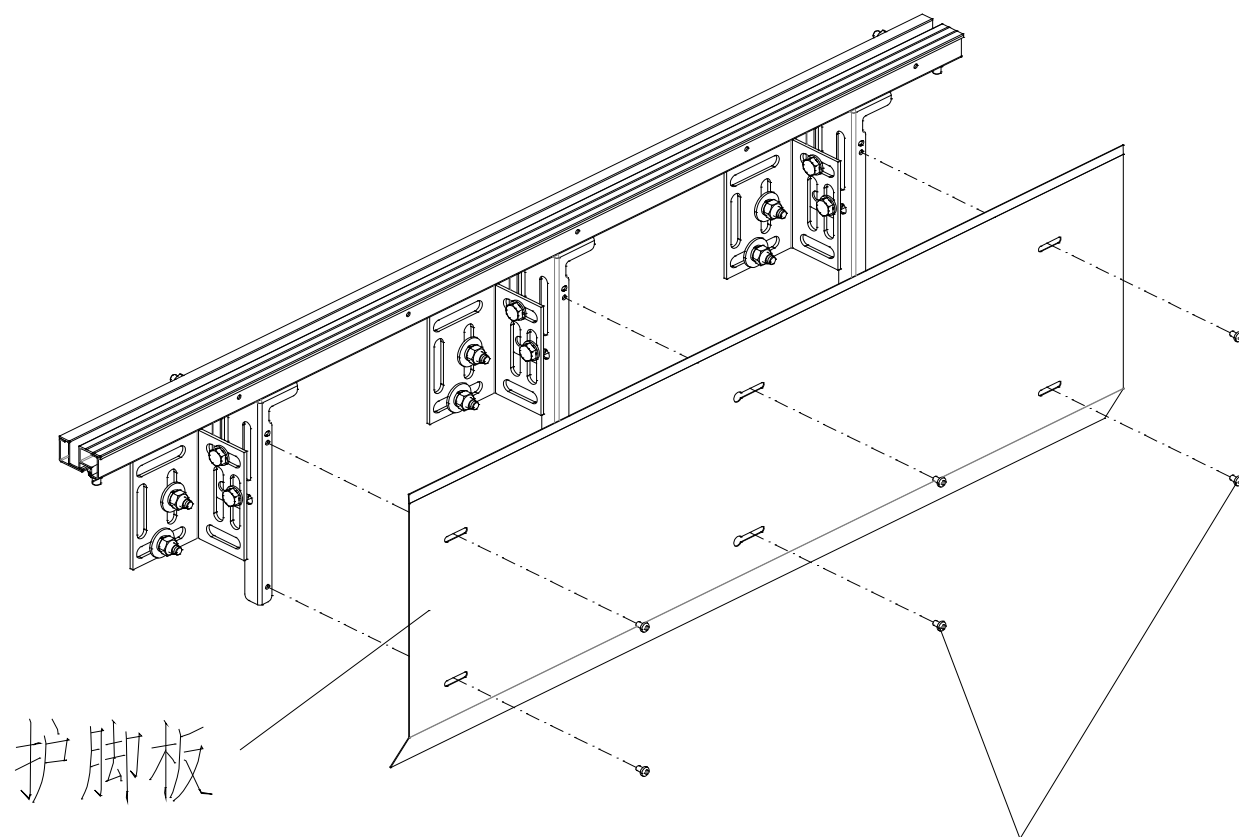


十字盘头槽螺钉M5×8


Сборка дверного косяка:

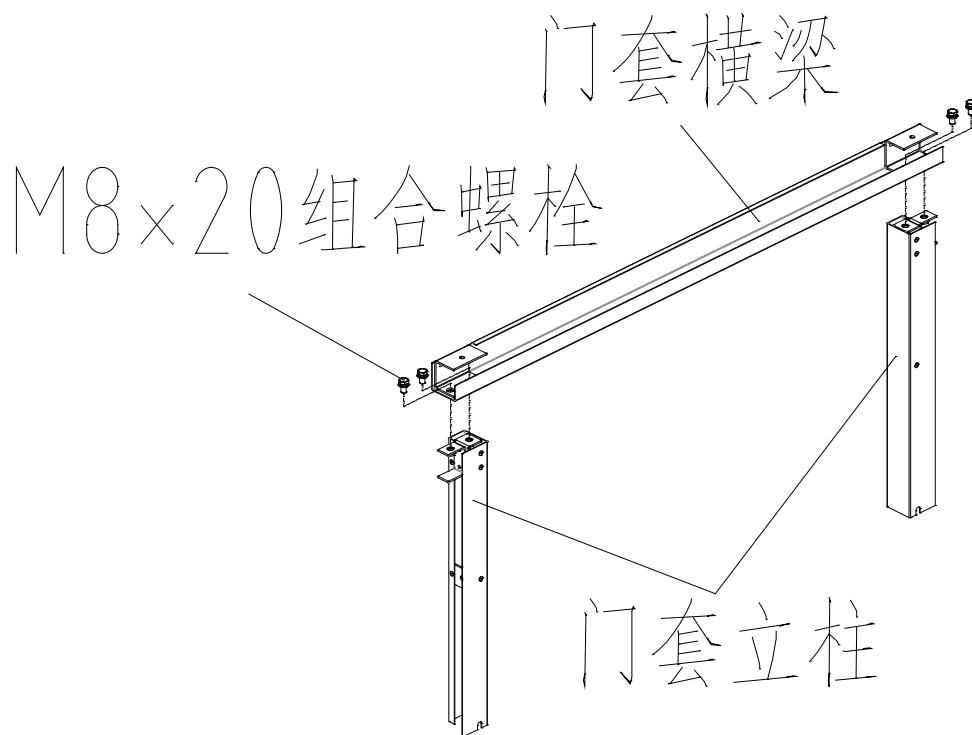

Инструкция по установке устройства противопожарных адиабатических дверей шахты центрального открывания

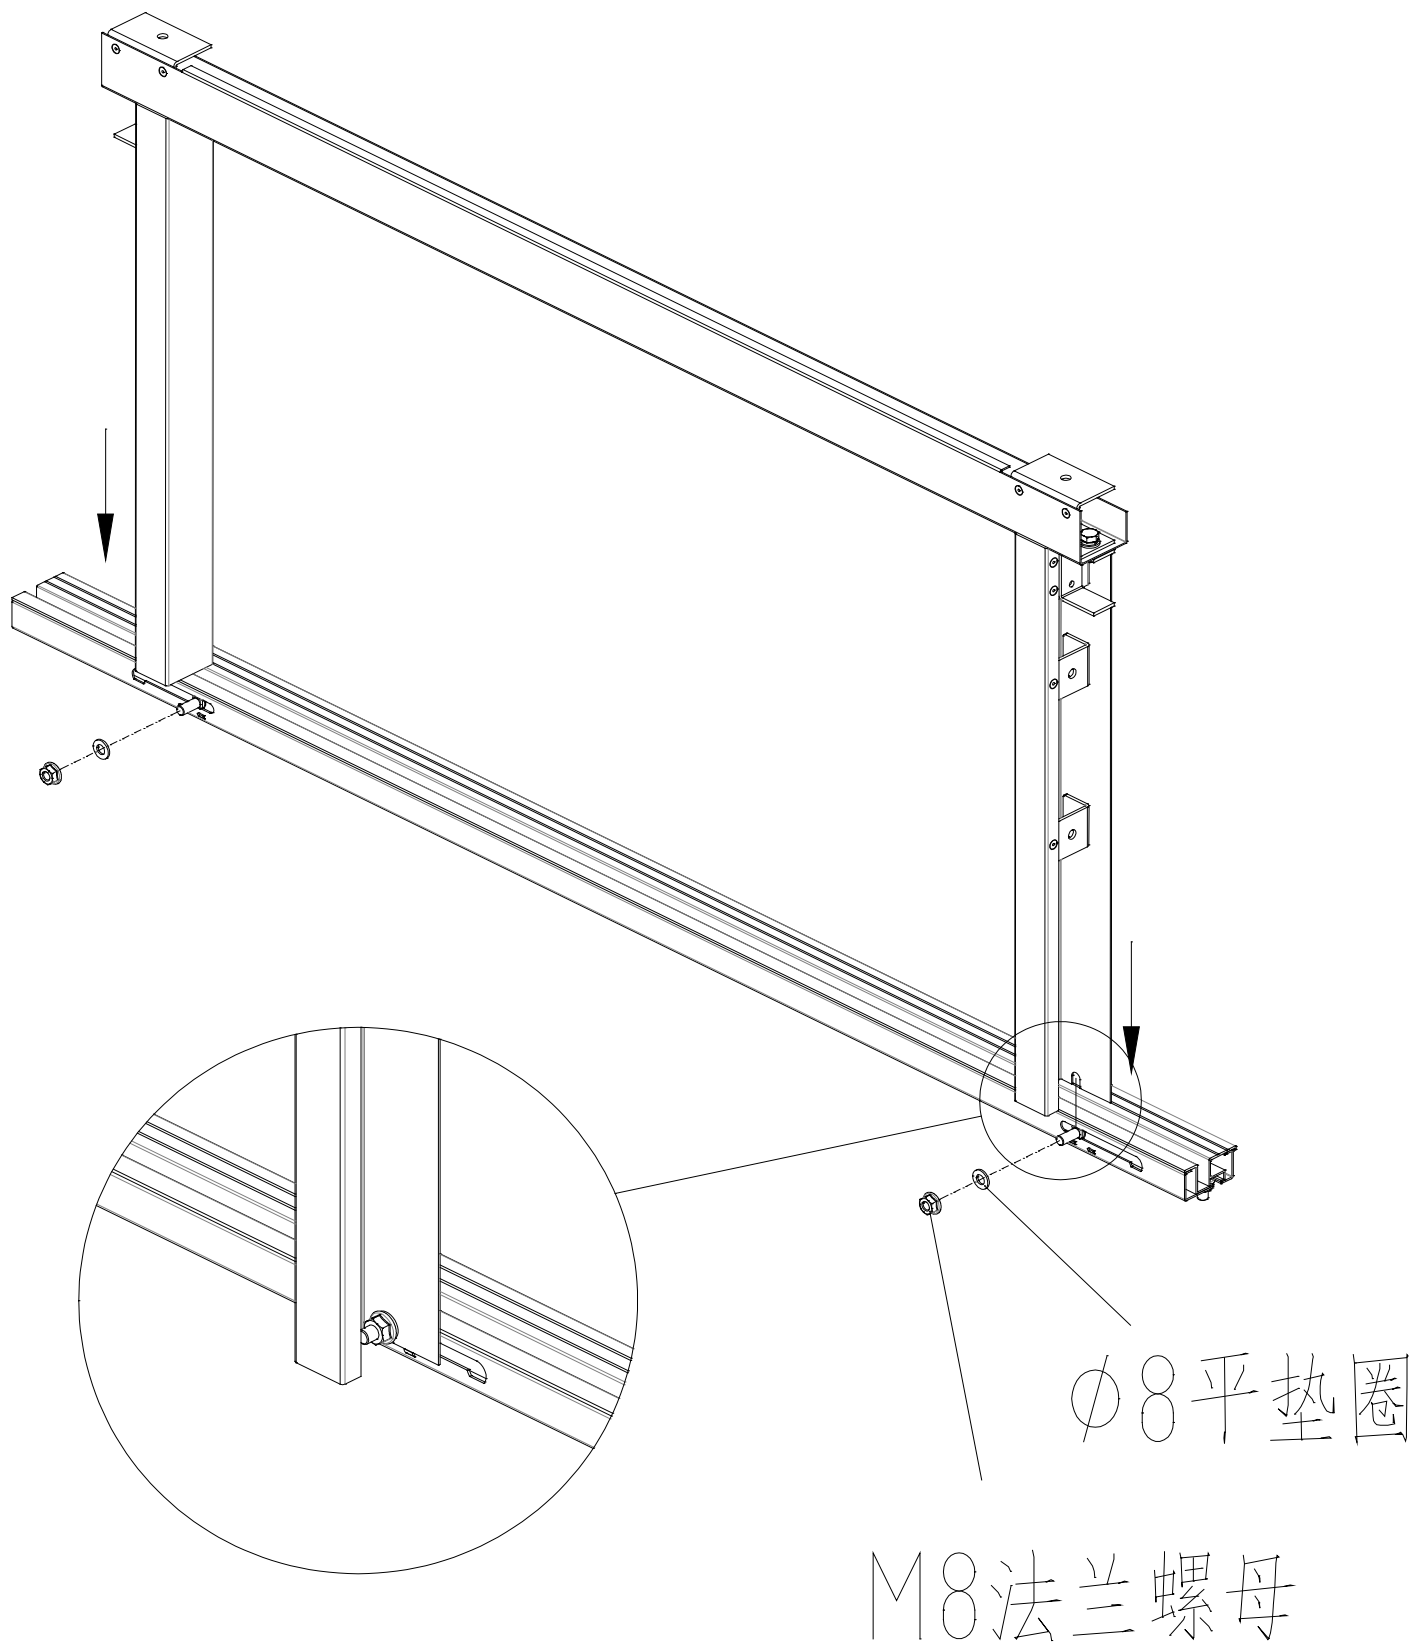


Инструкция по установке устройства противопожарных адиабатических дверей шахты центрального открывания

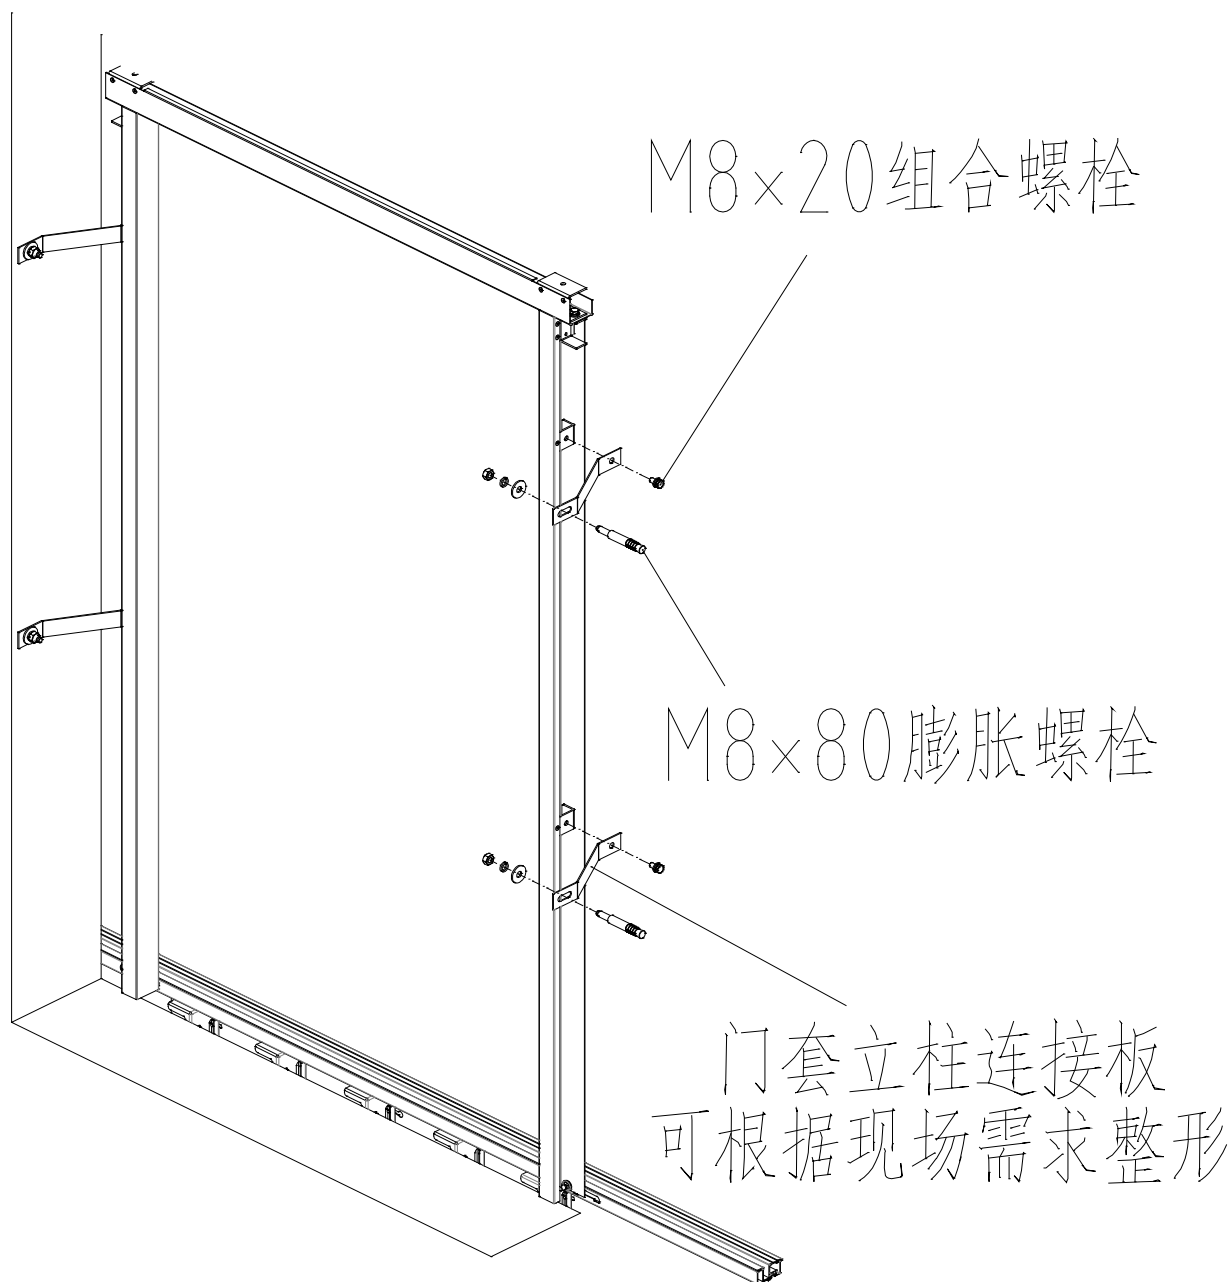


本图仅用于参考，门套跟墙体连接强度足够即可


Установка треугольного замка:

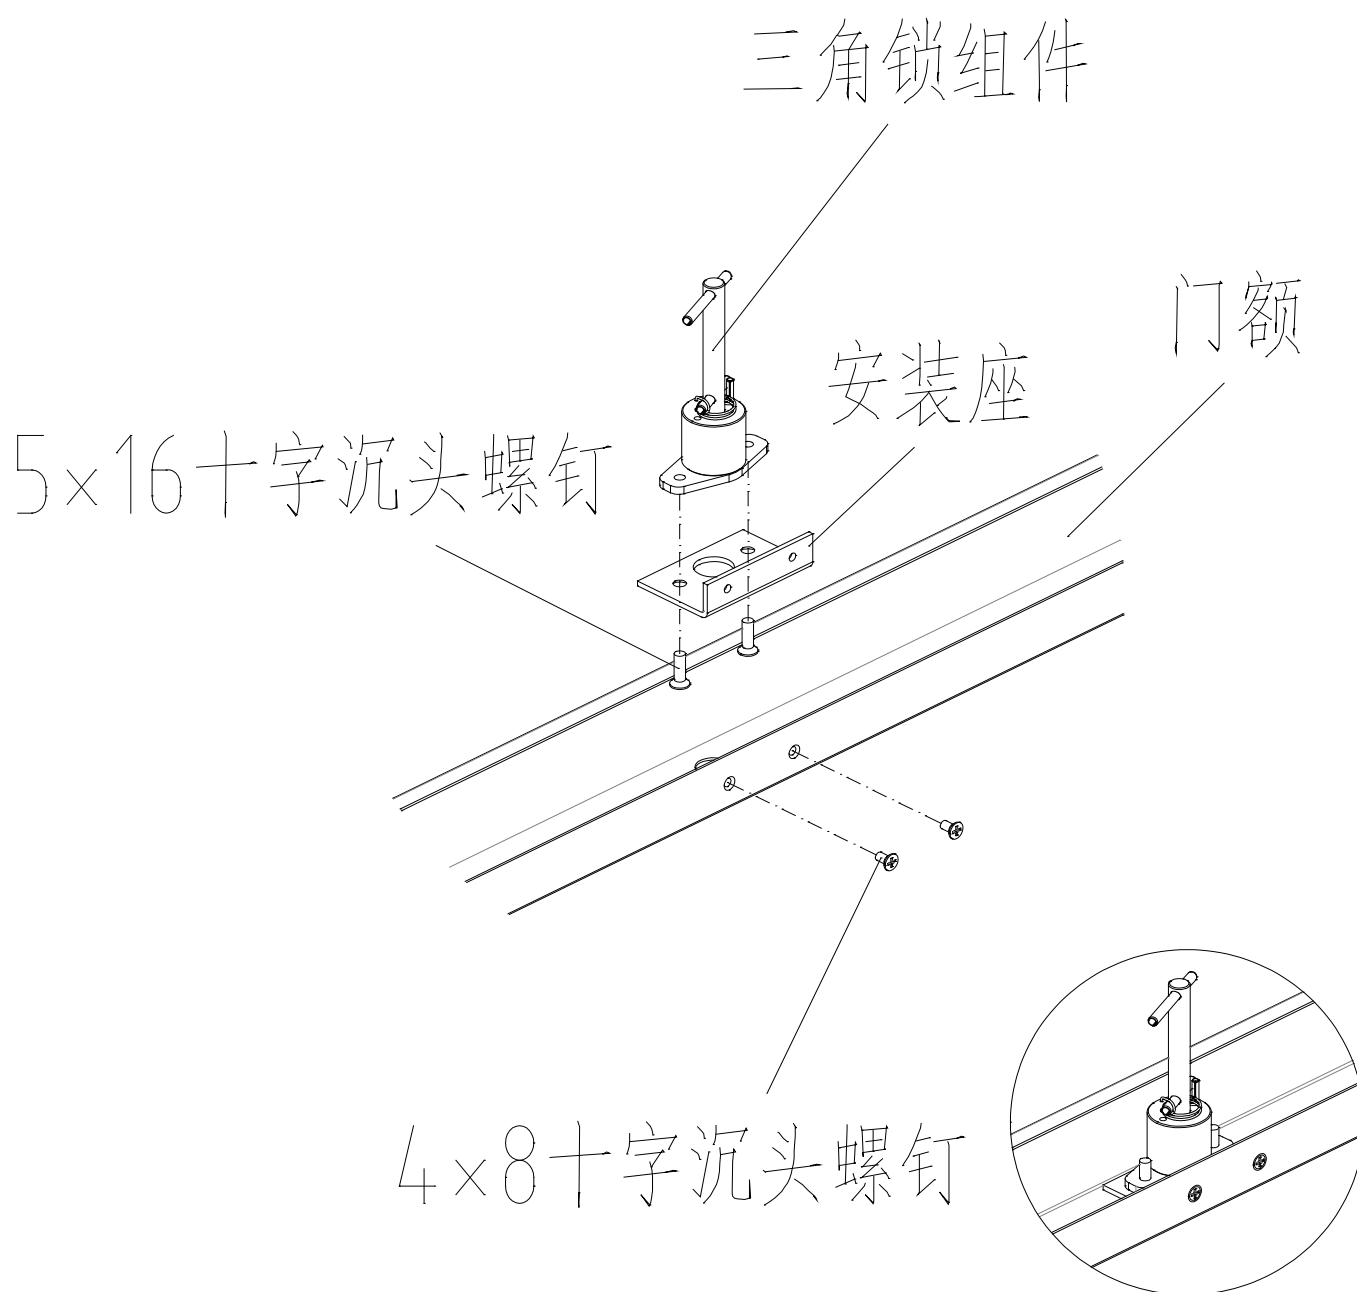

Монтаж деталей крепления механизма подвески:

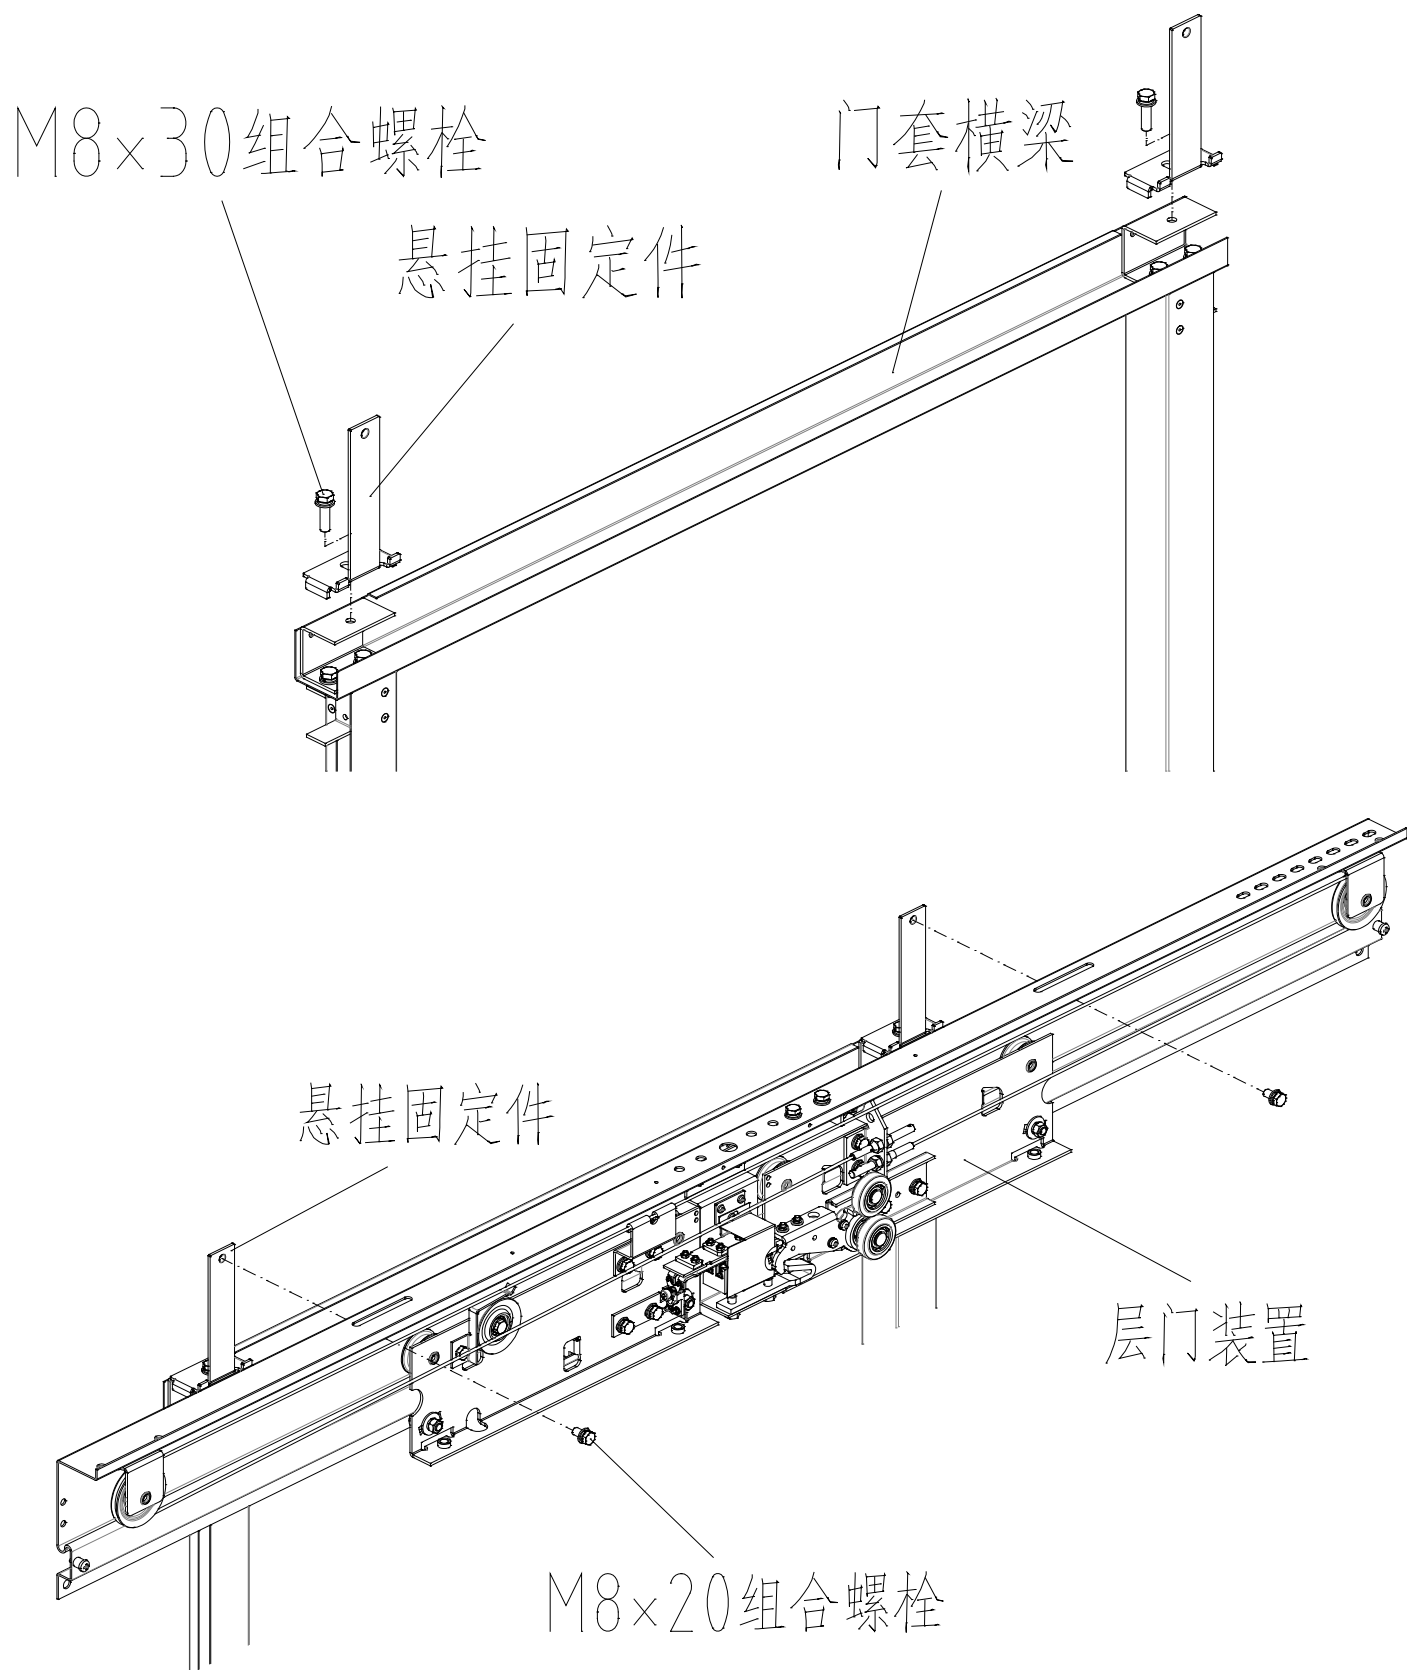


Инструкция по установке устройства противопожарных адиабатических дверей шахты центрального открывания

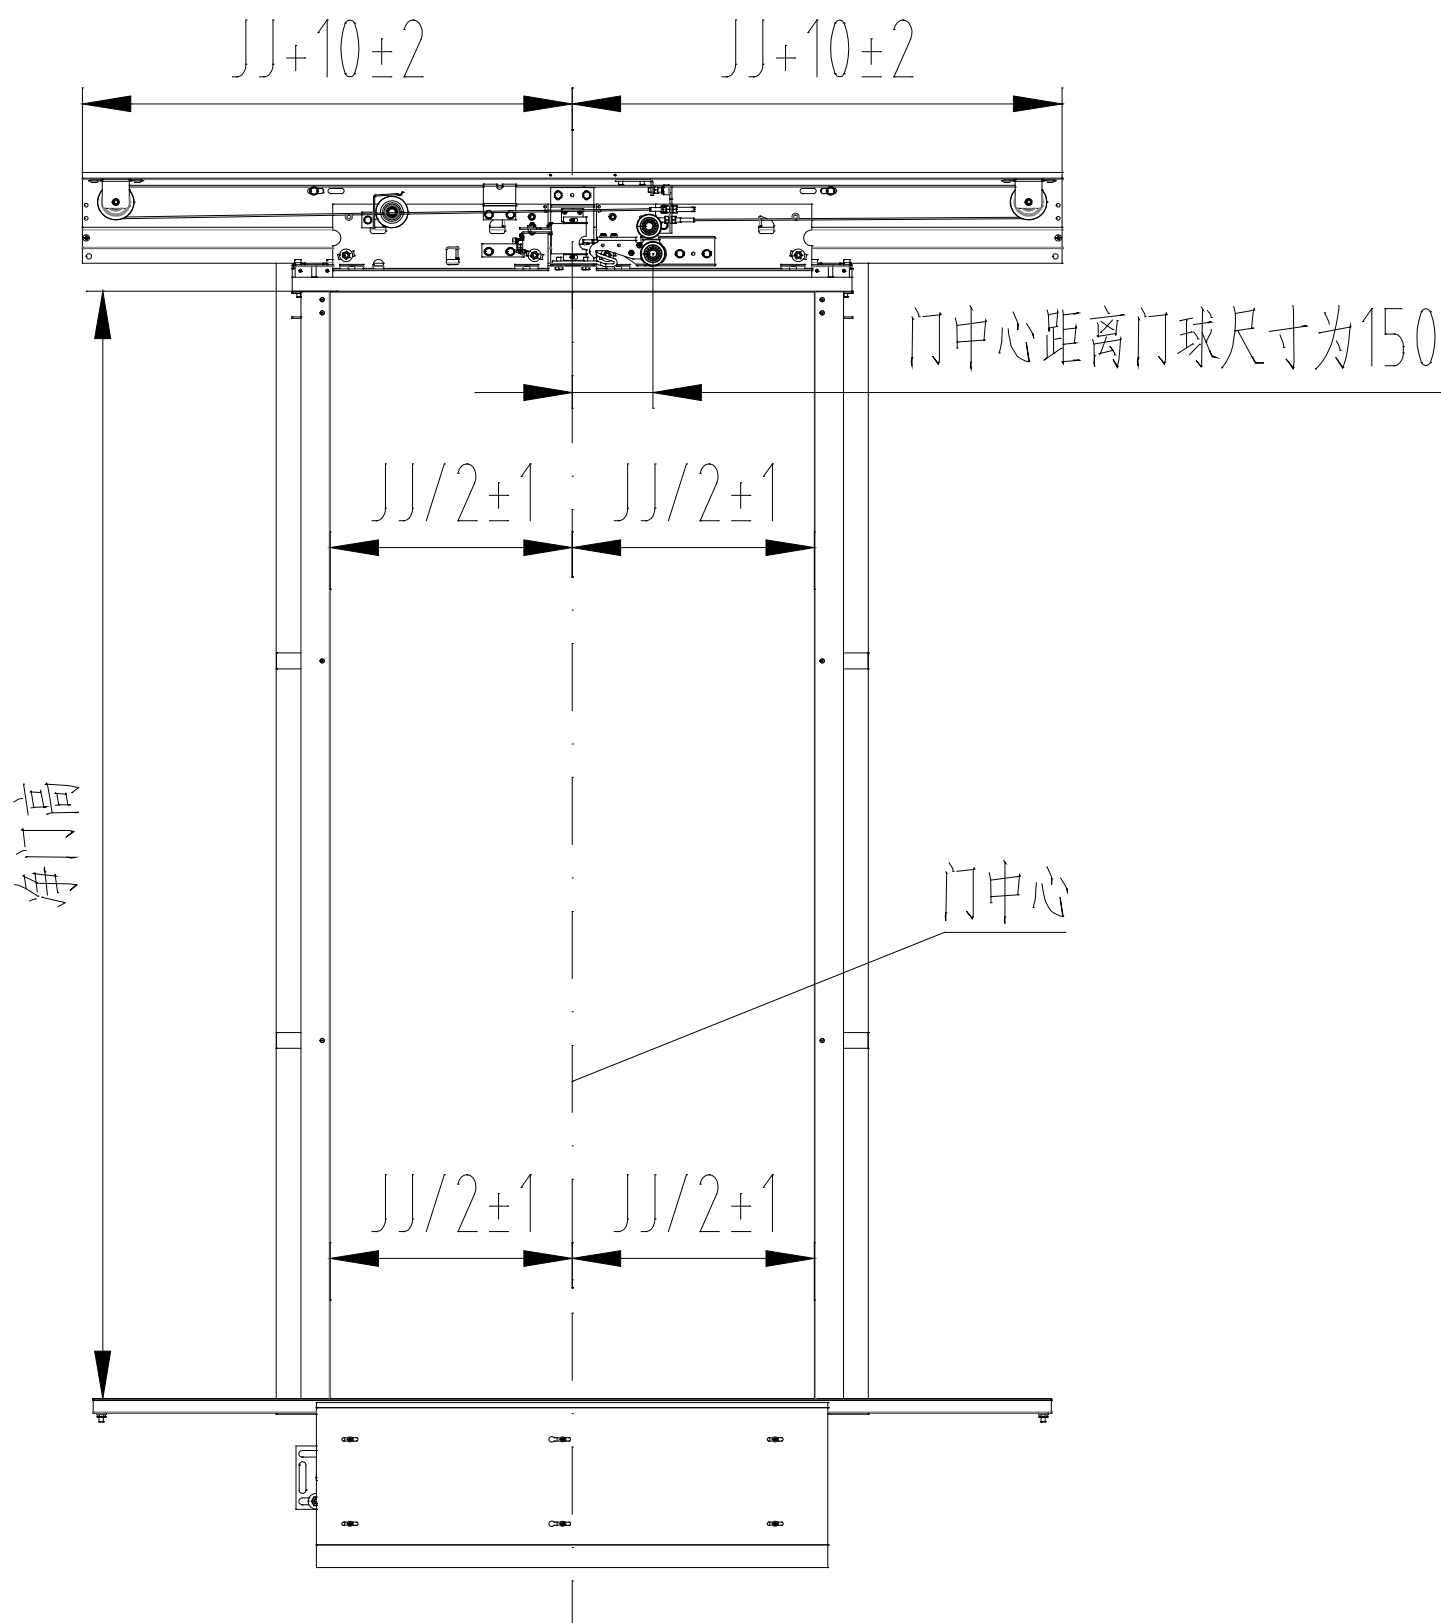


Опорная пластина должна быть параллельна верхней плоскости порога, а стойки дверного косяка должны быть подвешены прямо с помощью отвеса.


Установка кронштейнов опорной пластины:

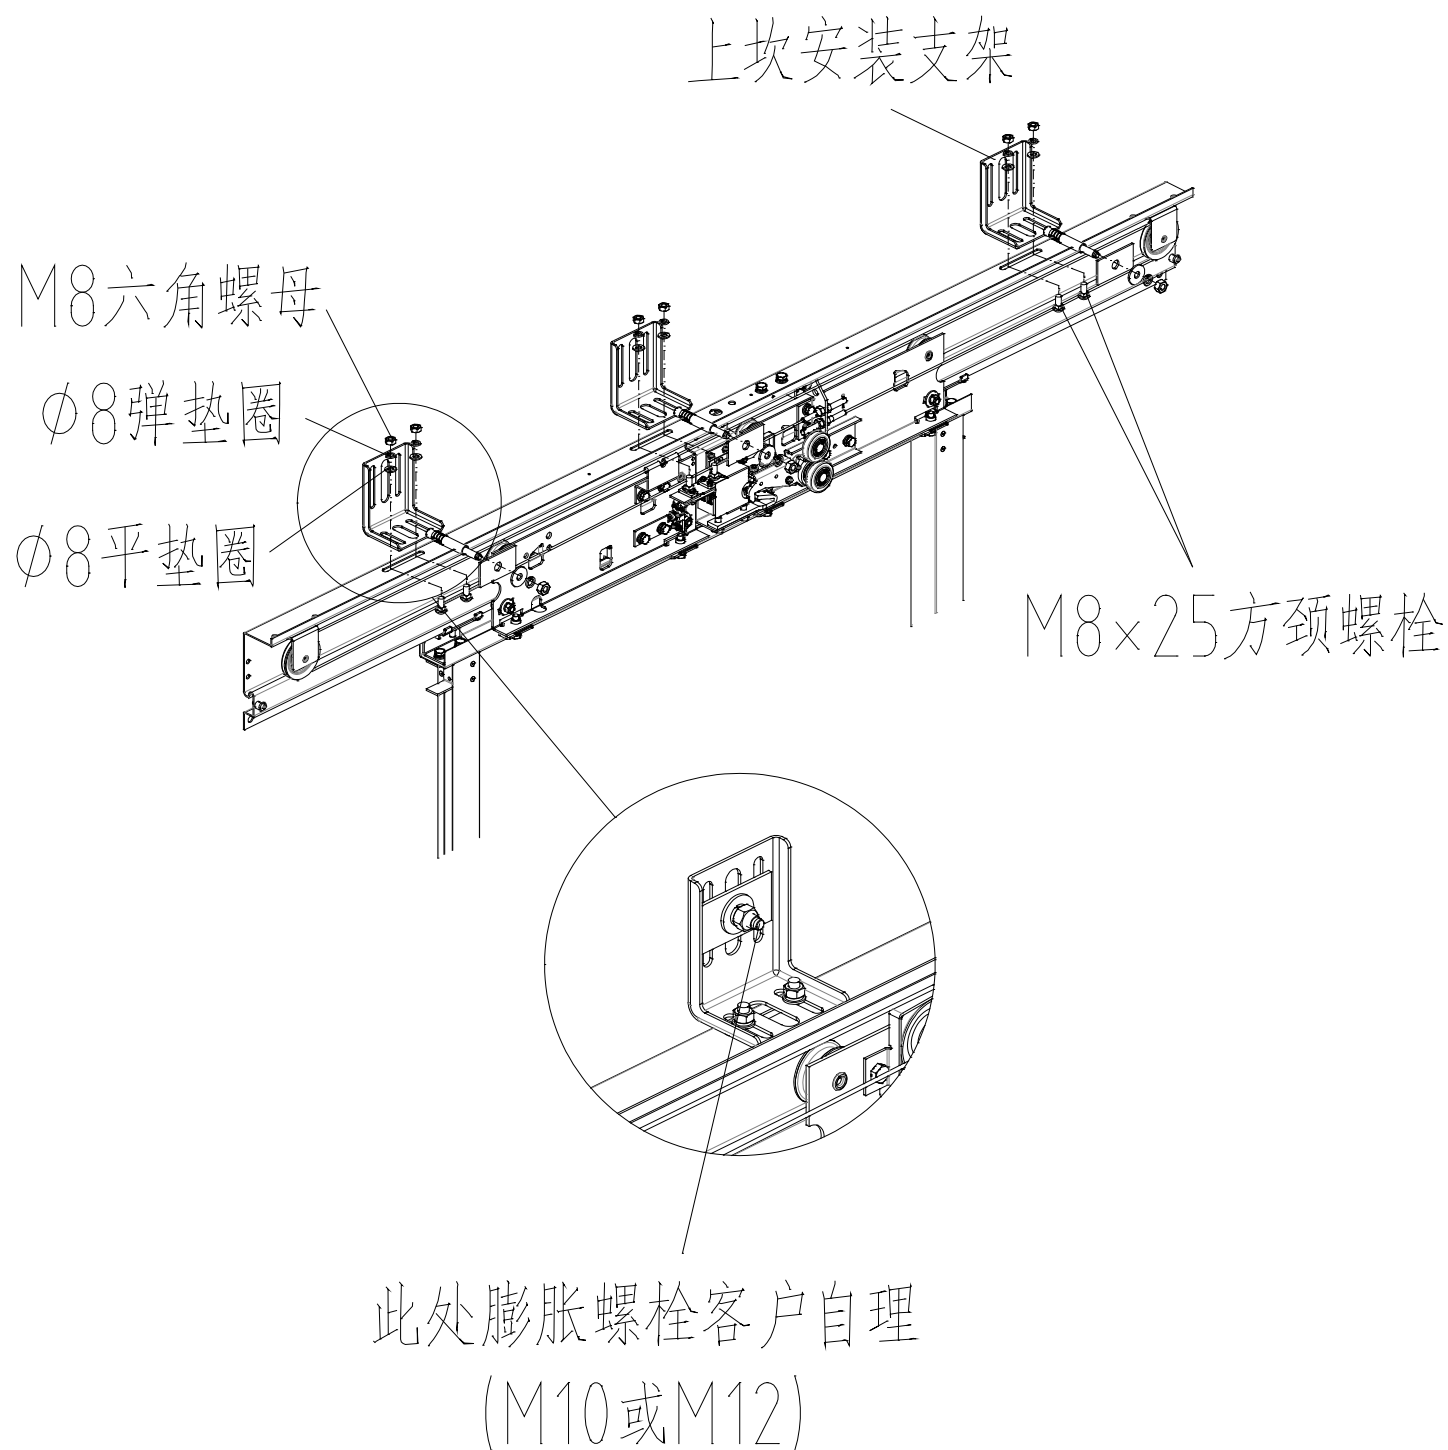


Установка дверных панелей:

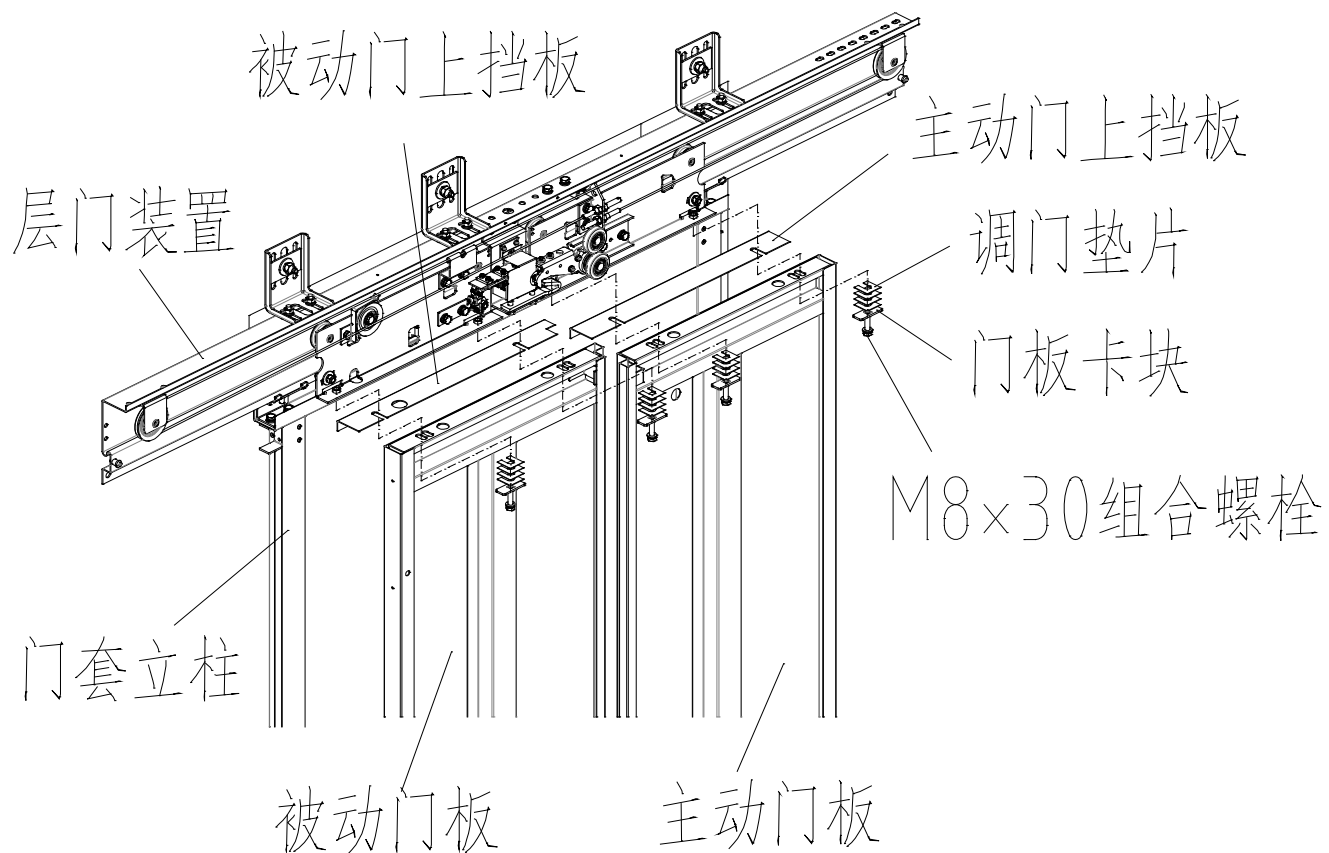

Установка дверного слайдера:

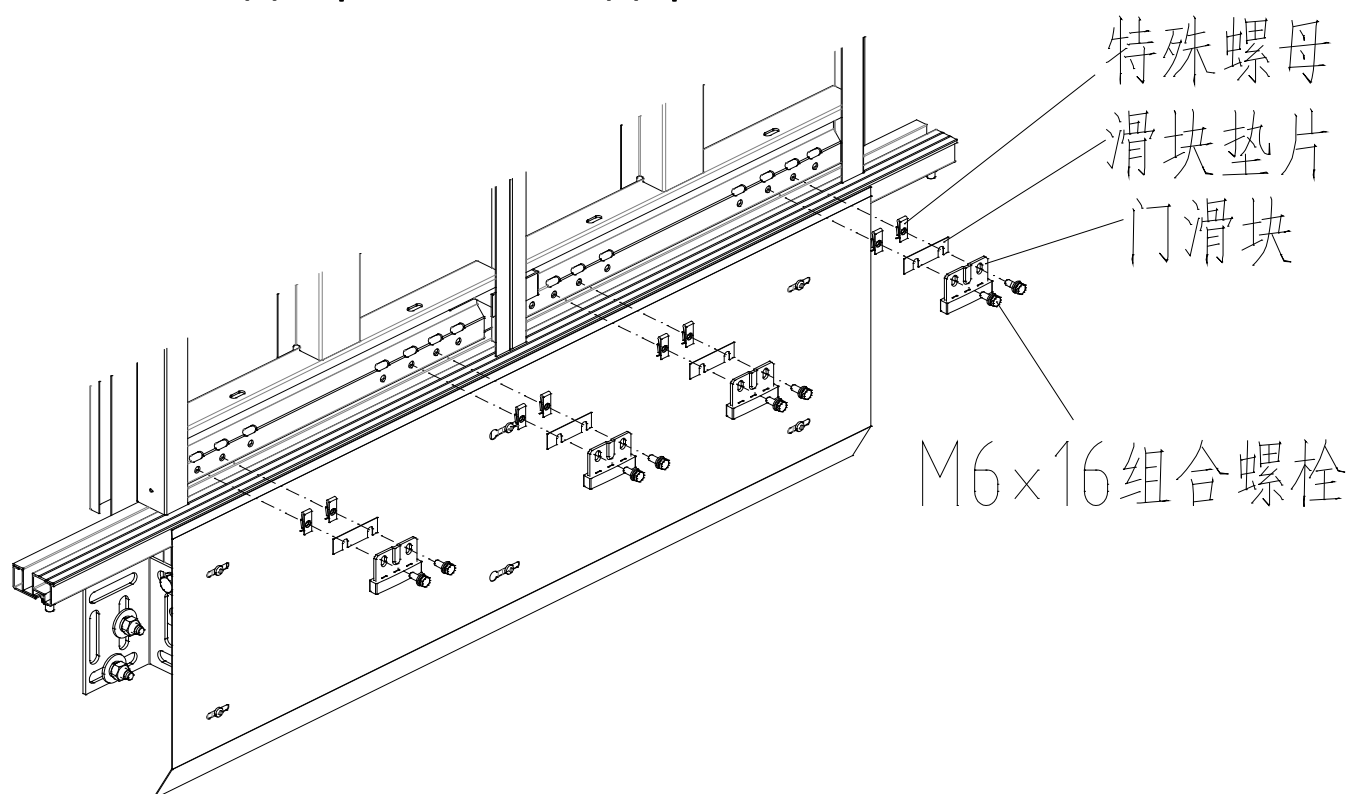


Установка боковой стопорной пластины и нижней стопорной пластины:

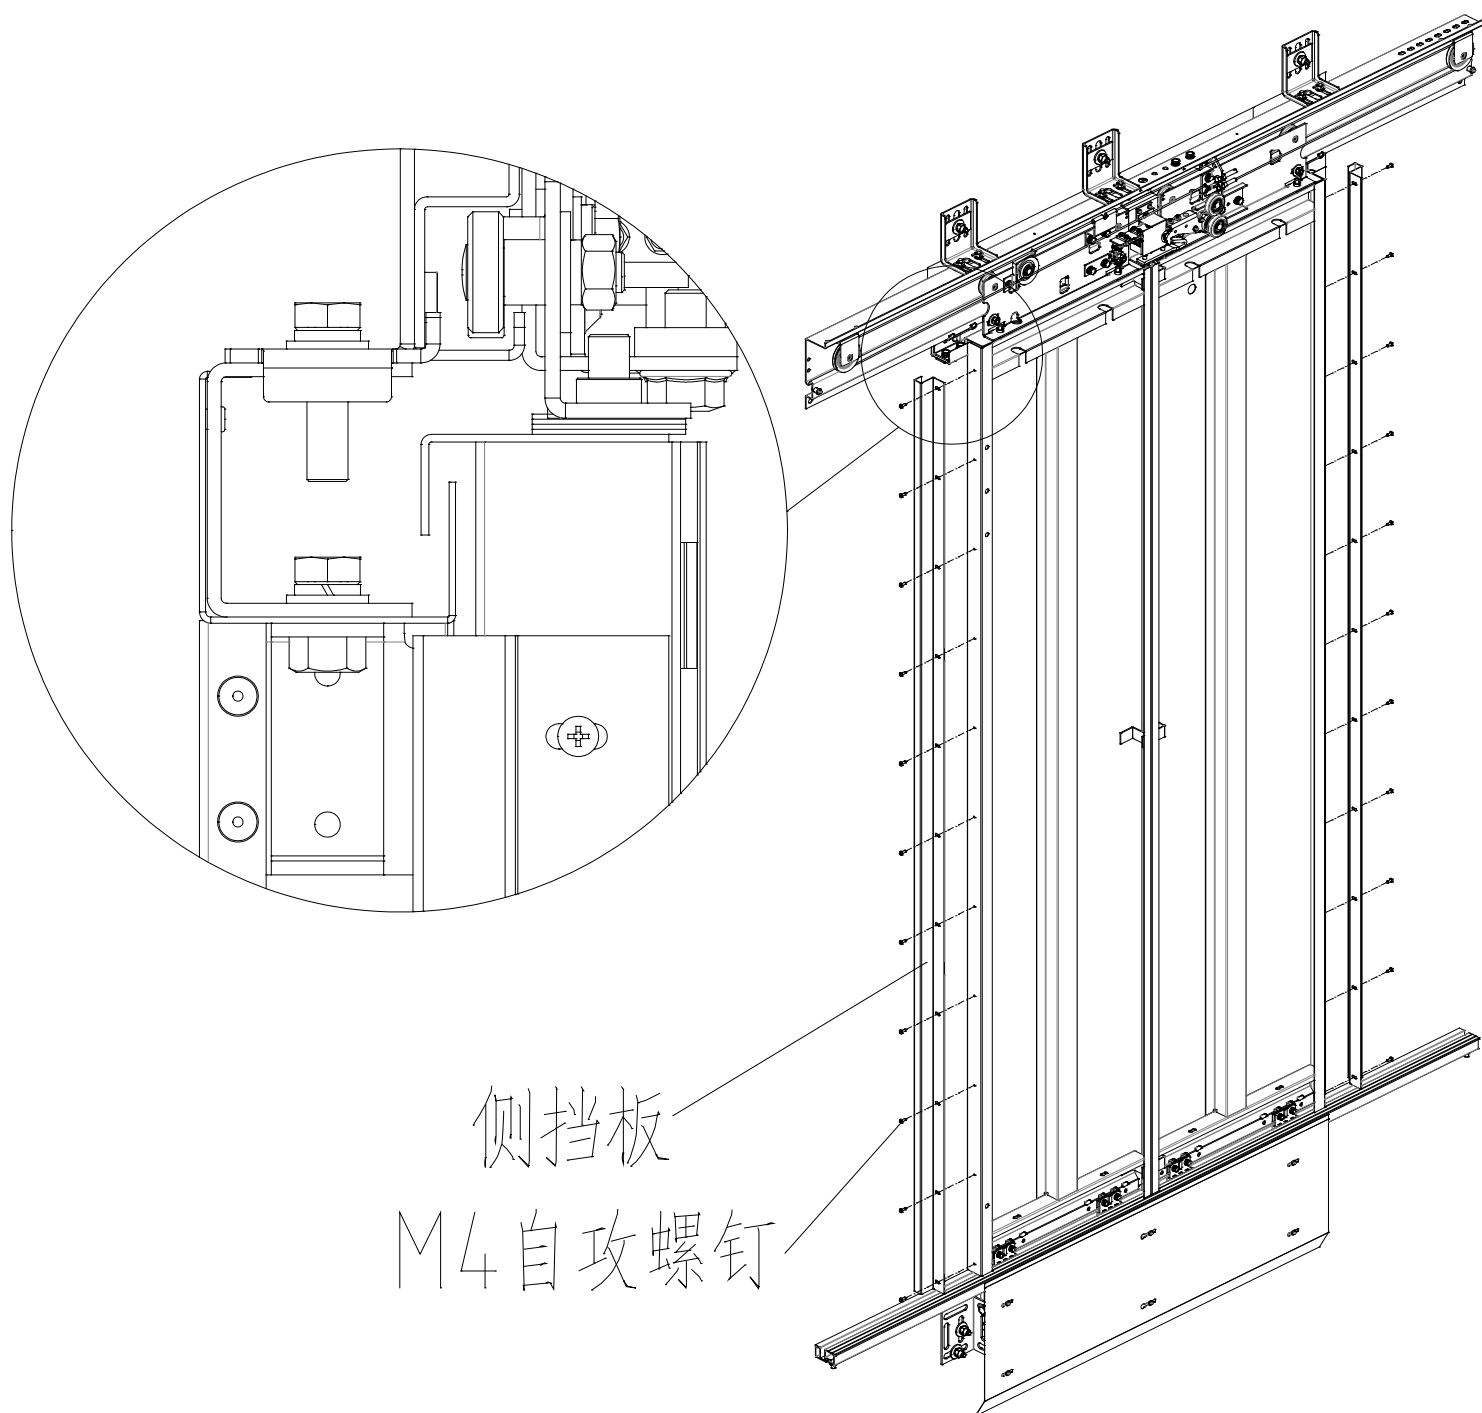

Как показано на рисунке выше, верхняя стопорная пластина, боковая стопорная пластина и дверной косяк накладываются друг на друга в складной конструкции, чтобы удовлетворить требованиям дверных панелей по предотвращению огня и дыма.


Инструкция по установке устройства противопожарных адиабатических дверей шахты центрального открывания

Во время установки на рабочей площадке зазор между дверной панелью и верхней стопорной пластиной и боковой стопорной пластиной дверного косяка, а также дверным косяком составляет 4 мм.

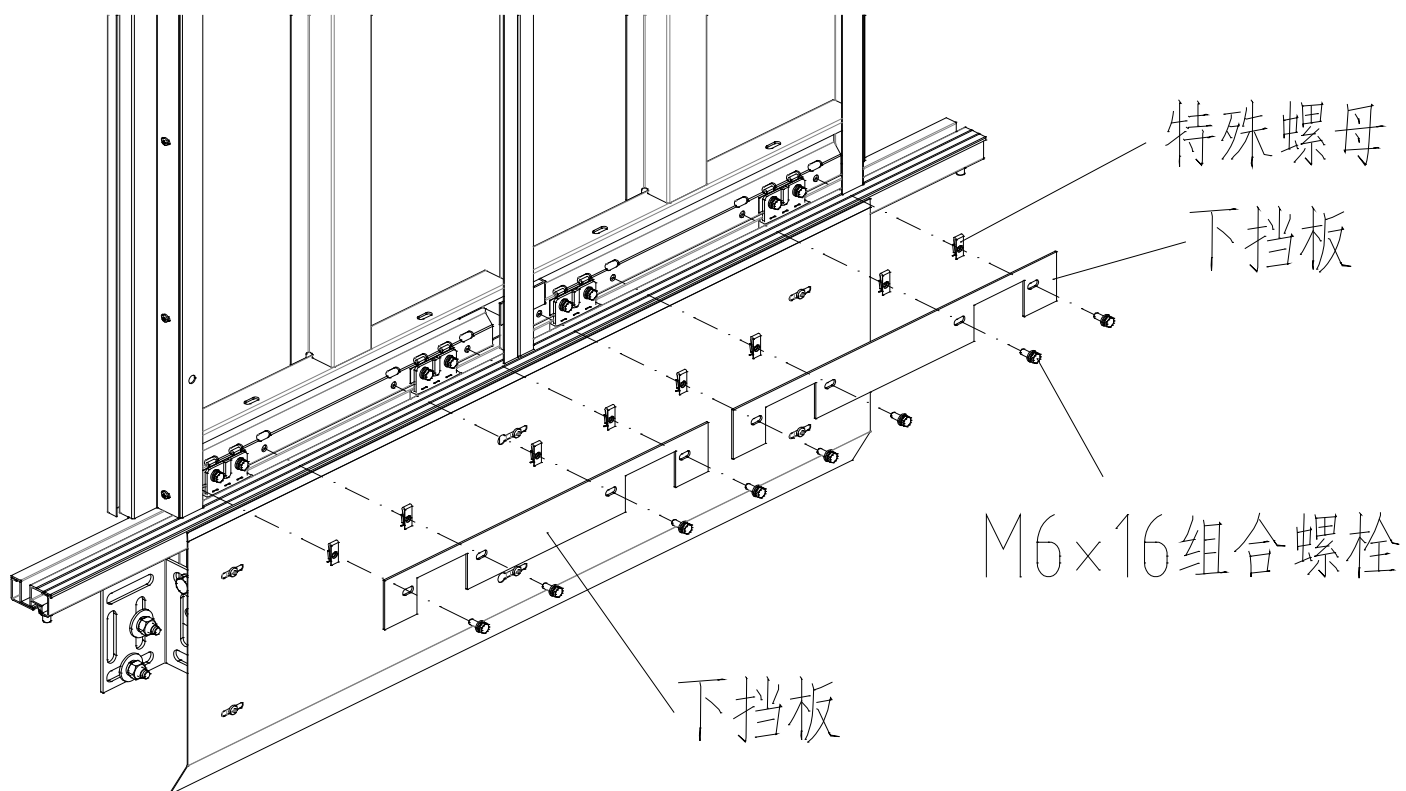

Обычная установка шкива каната модуля груза и кронштейна направляющего желоба:


重锤绳轮装置组件

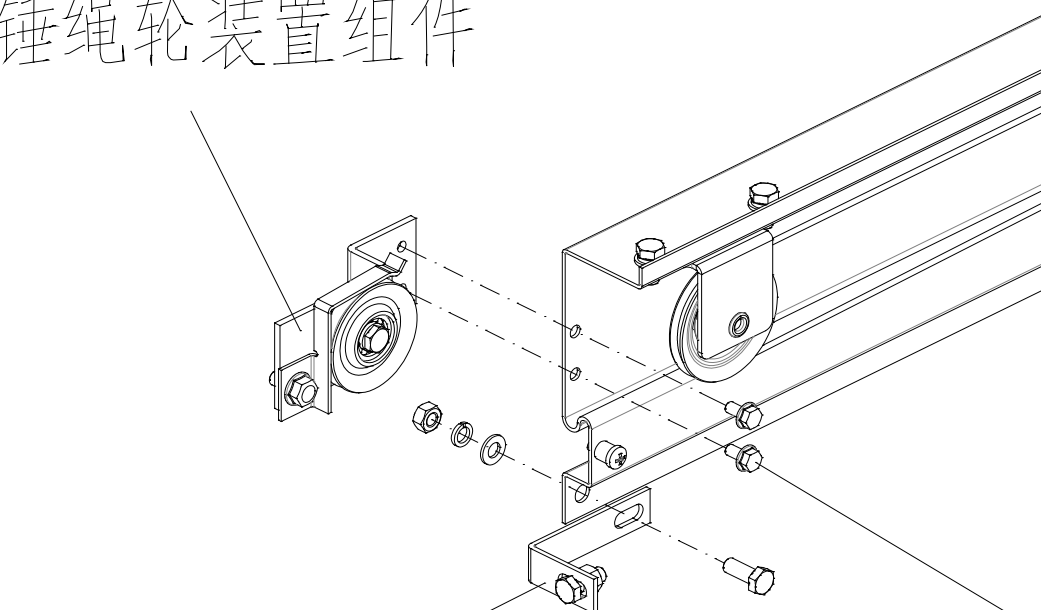

连接板组件


M6×12 法兰螺栓

支撑架组件

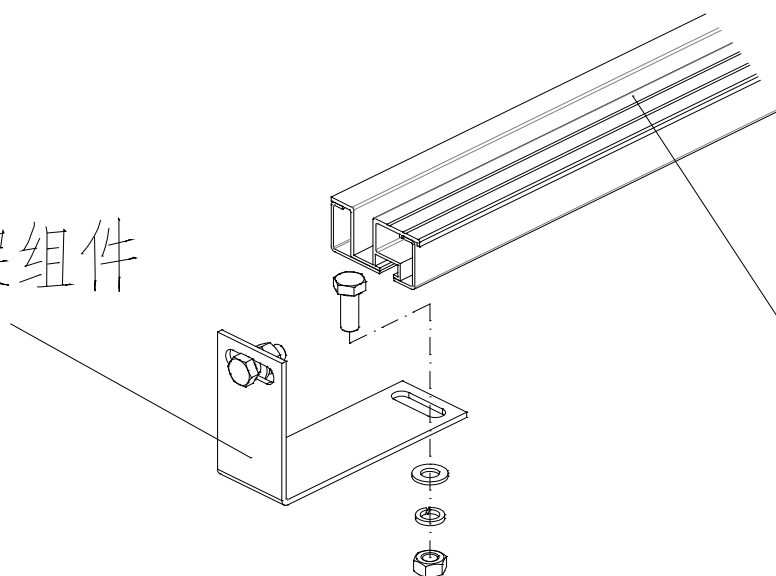


层门地坎

Монтаж направляющего желоба:

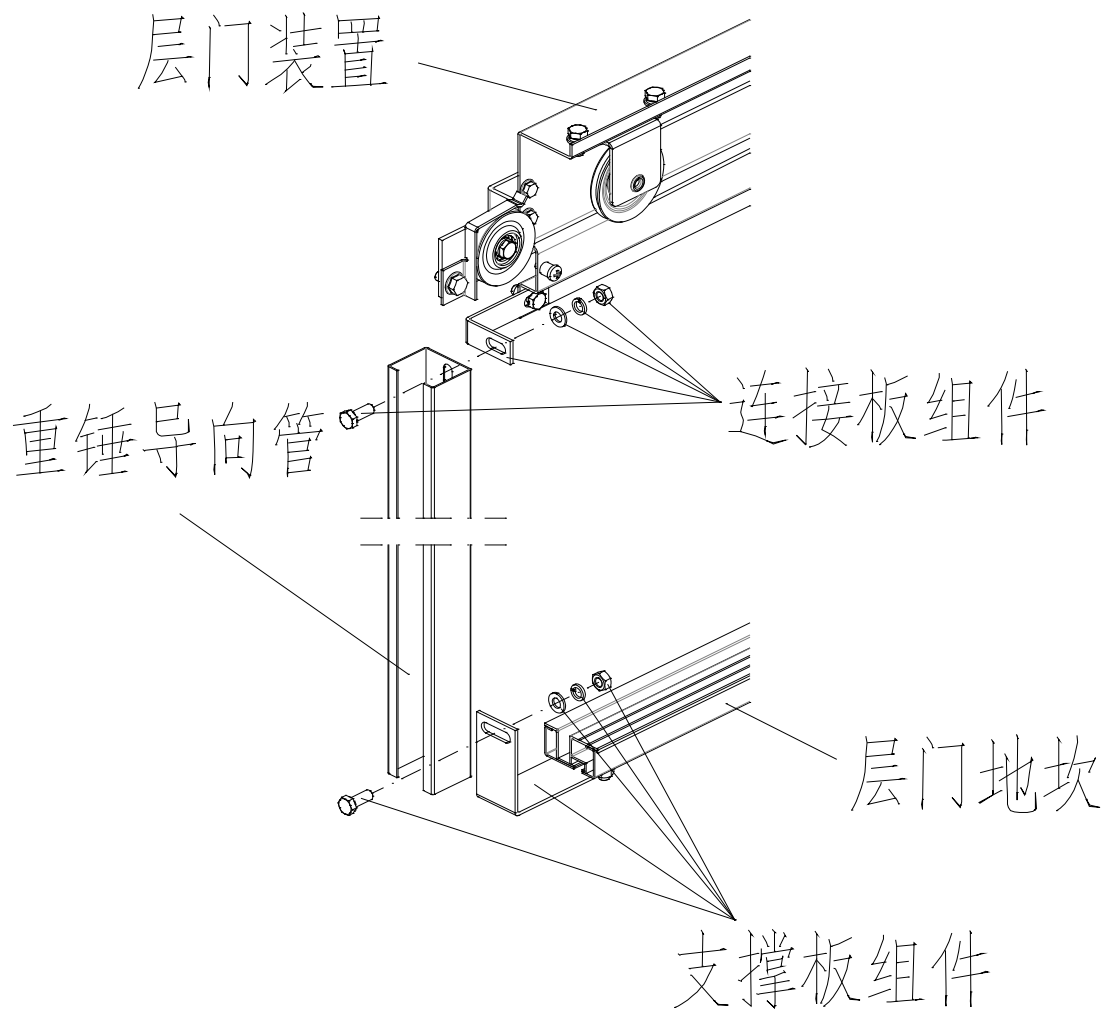

Обычная установка модуля груза:

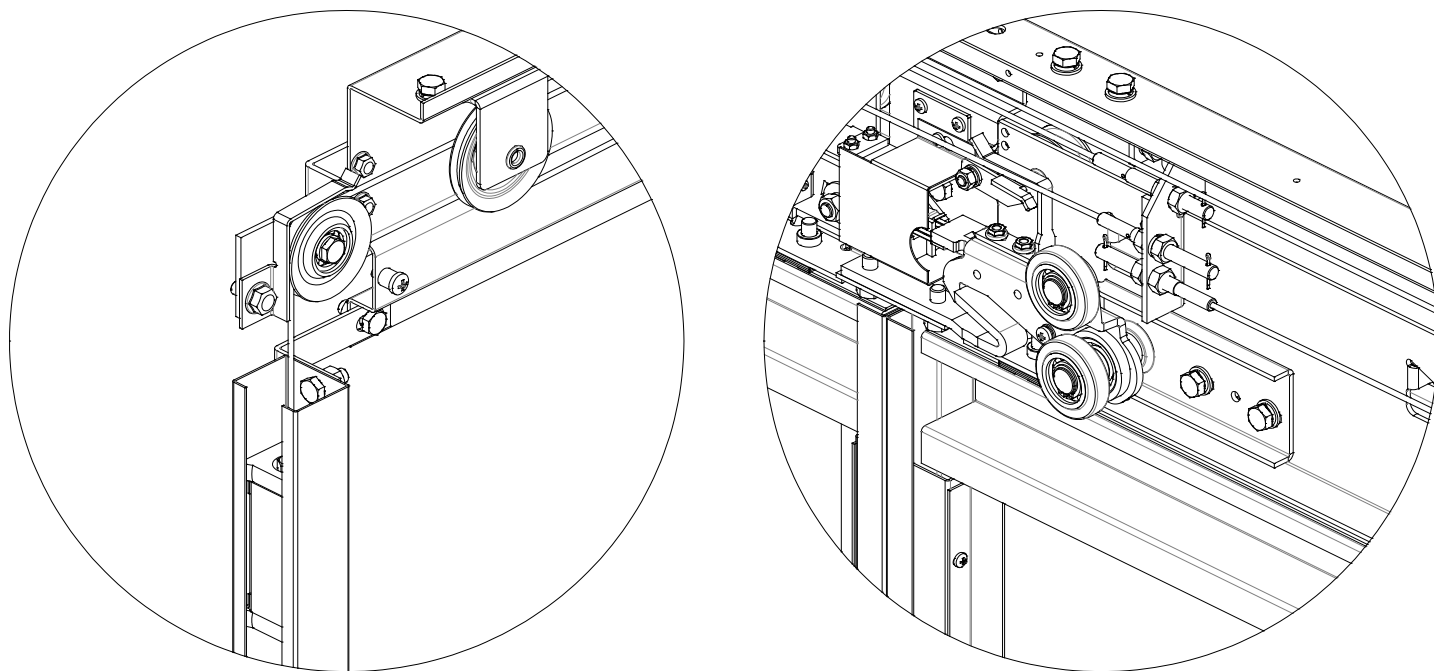

Как показано на рисунке: молотковый стержень груза правильно помещается в канал направляющего желоба, канат пропускается вокруг шкива каната модуля груза, оголовок каната правильно вставляется в кронштейн крепления каната и гайка затягивается.


OCM01EF

(C0 adiabatic
landing door device)

Landing door system


Center opening fireproof adiabatic landing door device installation manual

Complete product demonstration (This manual won't show landing door
dust cover)

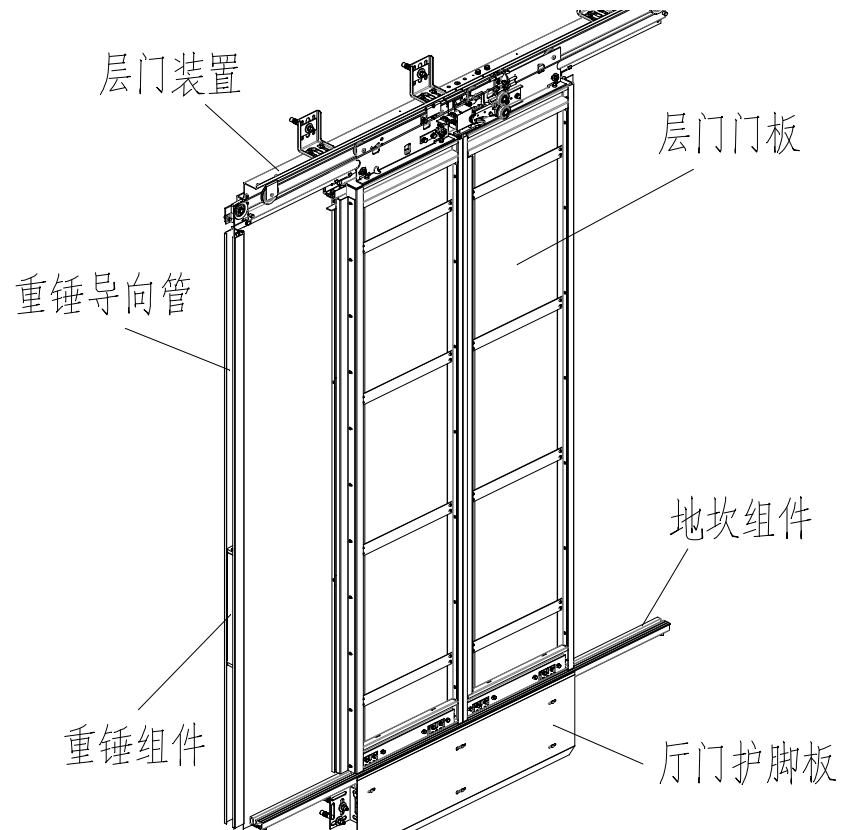


Sill installation:

Center opening fireproof adiabatic landing door device installation manual

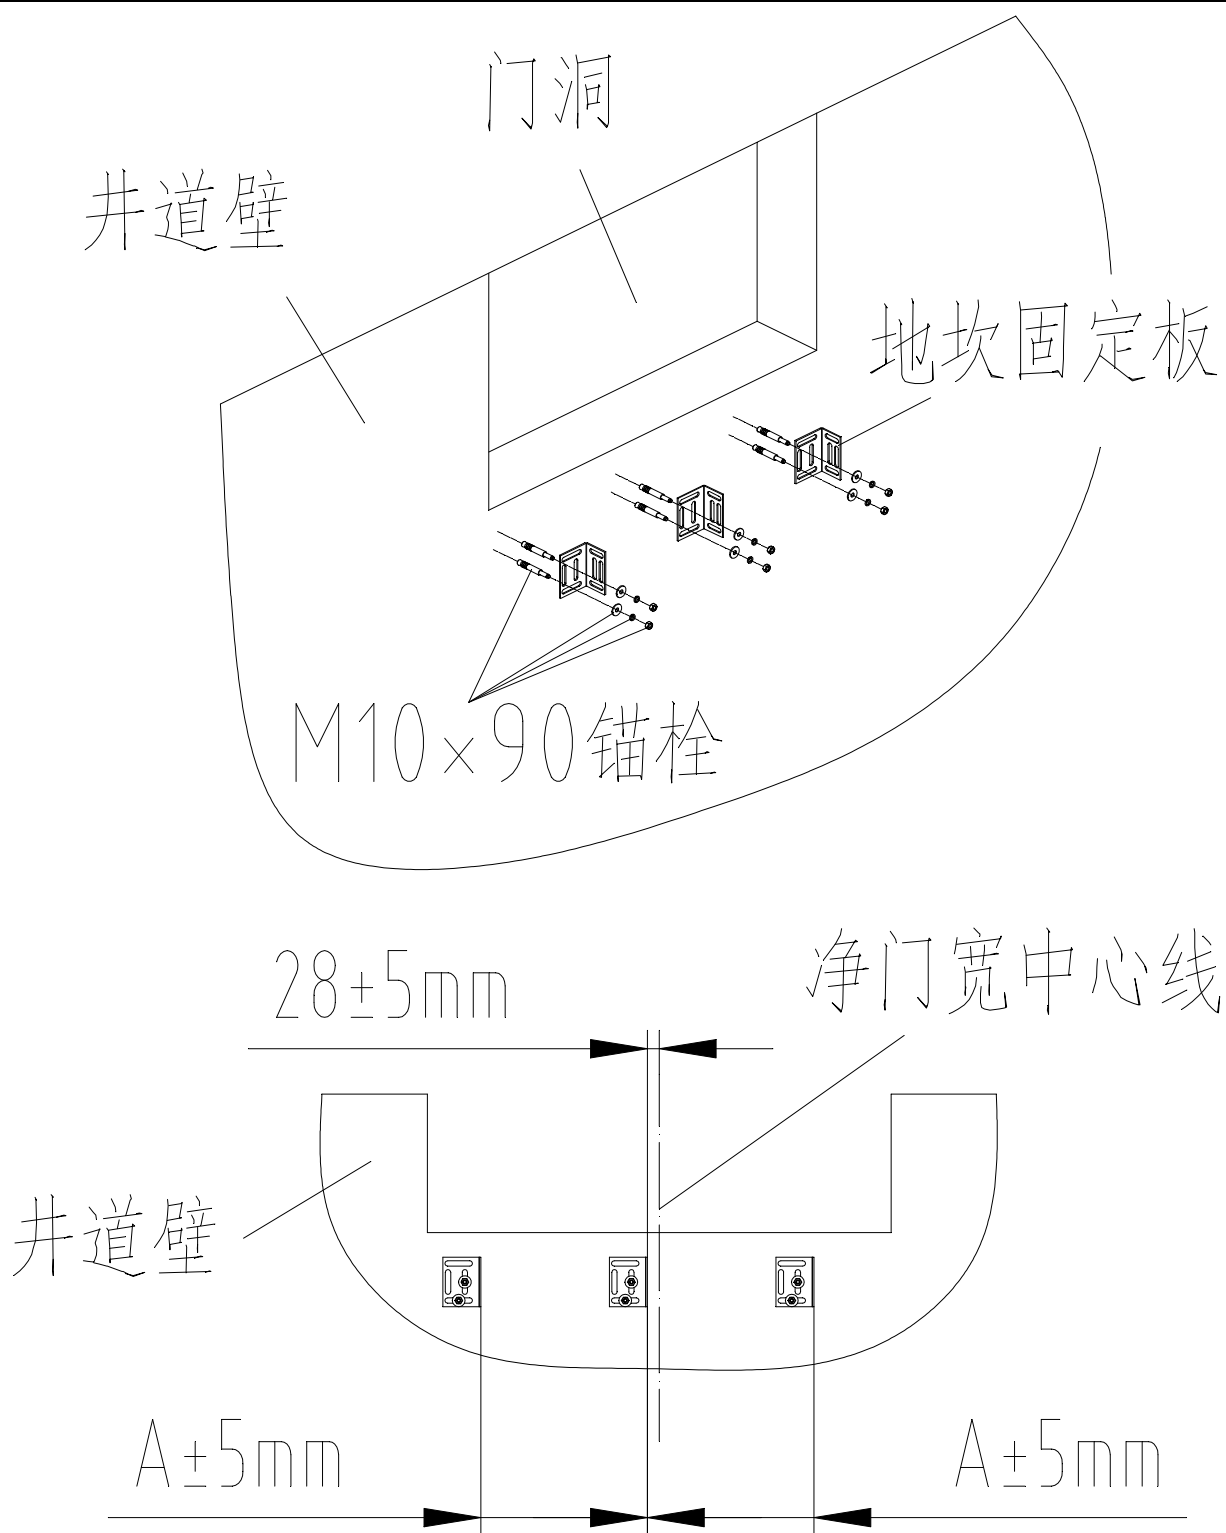


净开门J	650	700	750	800	850	900	950	1000	1050	1100	1150	1200
A	270	295	320	345	370	395	420	445	470	495	520	545

Center opening fireproof adiabatic landing door device installation manual

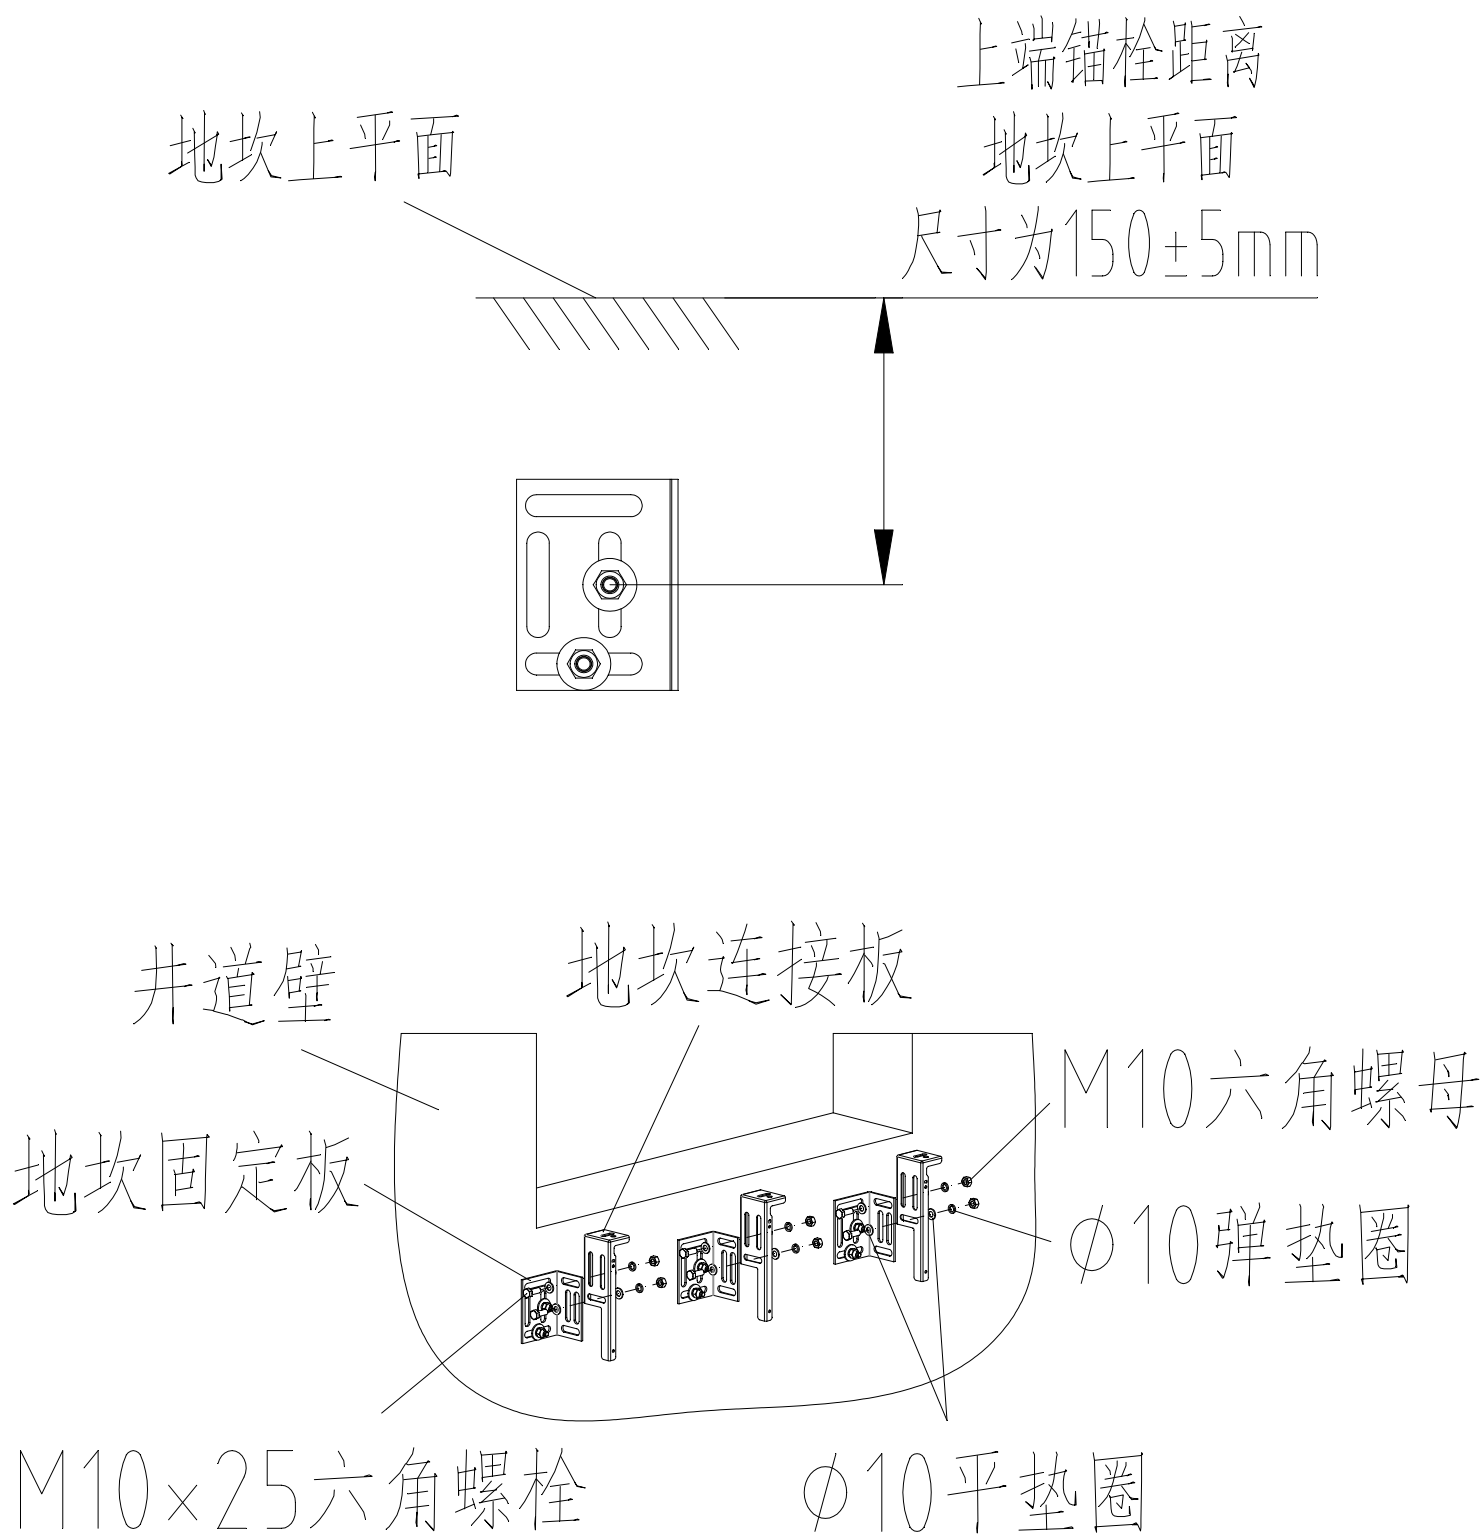


Center opening fireproof adiabatic landing door device installation manual

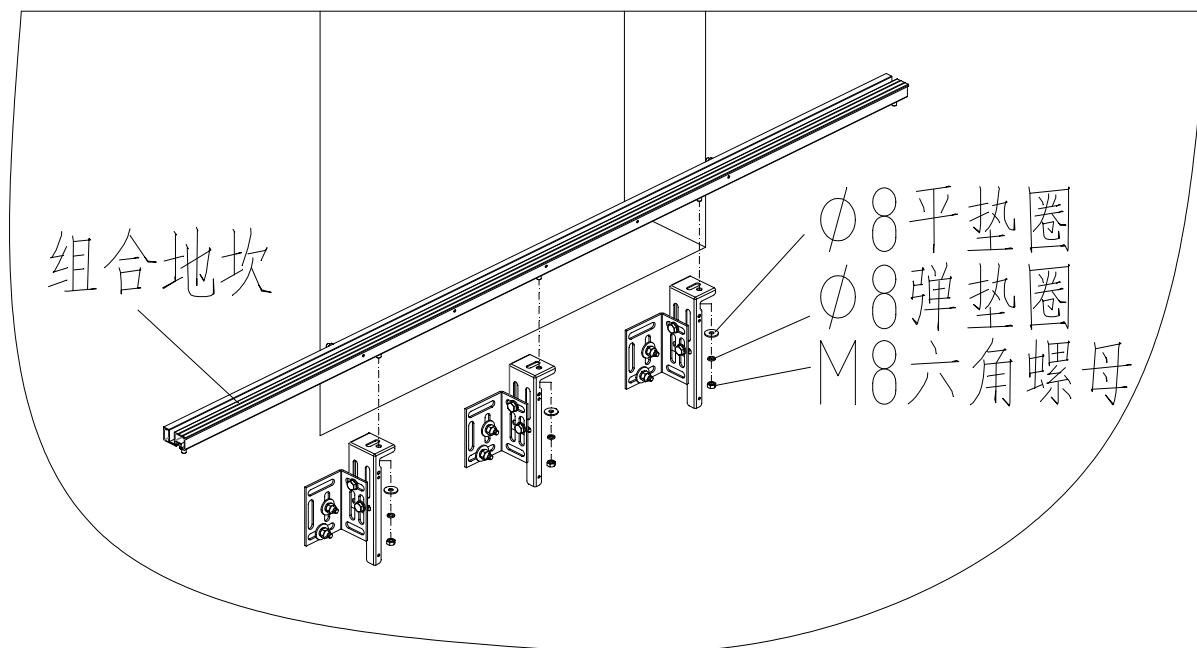

Center opening fireproof adiabatic landing door device installation manual


地坎上平面不能
低于地面装饰层
此面须用水平尺调平

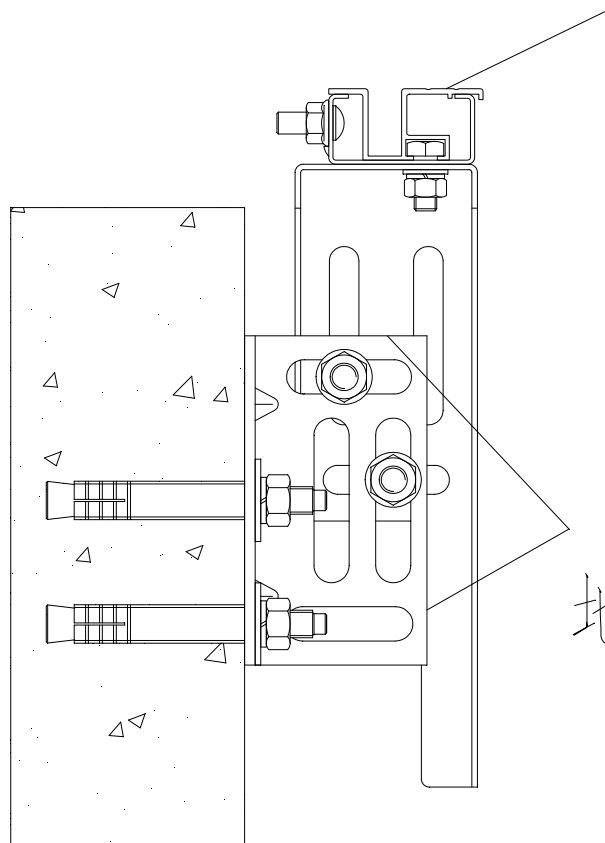


地坎安装好后
地坎支架须点焊加固

Apron installation:


Center opening fireproof adiabatic landing door device installation manual

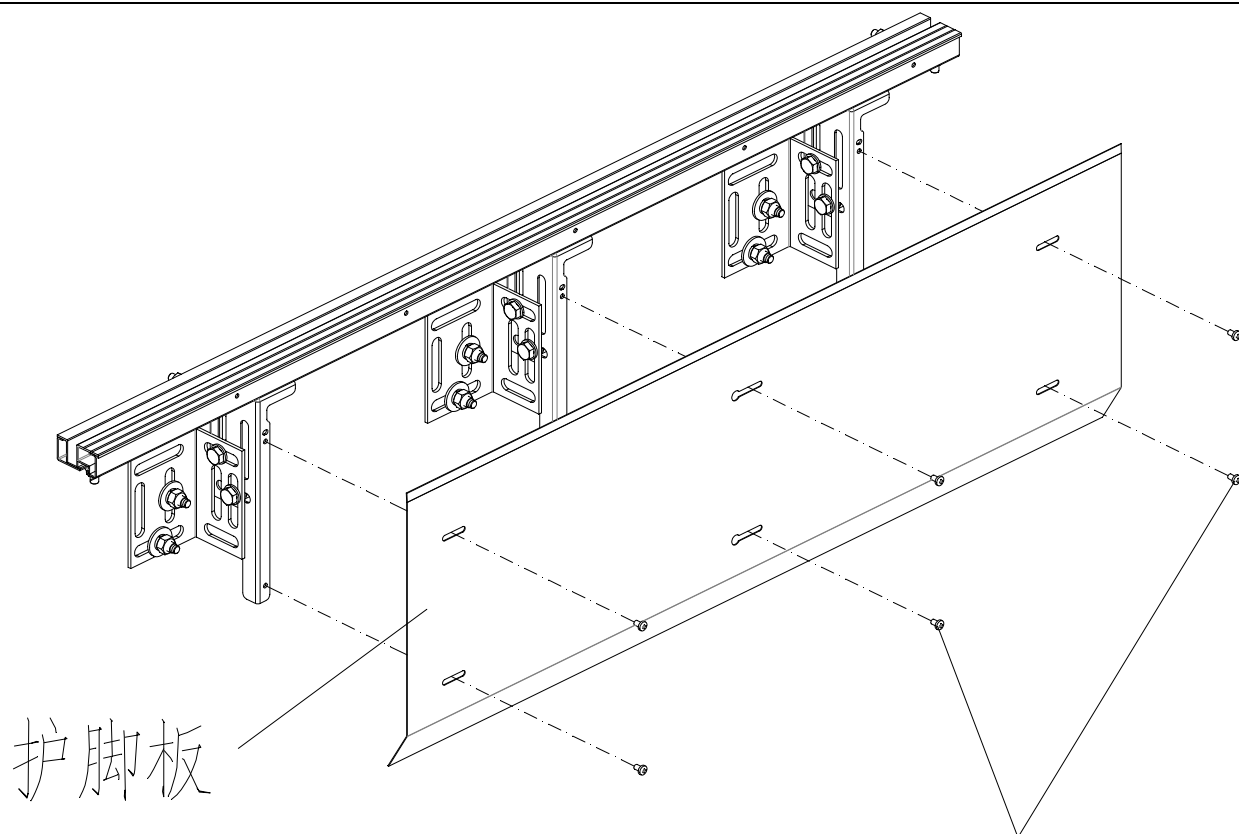


Door jamb assembly;

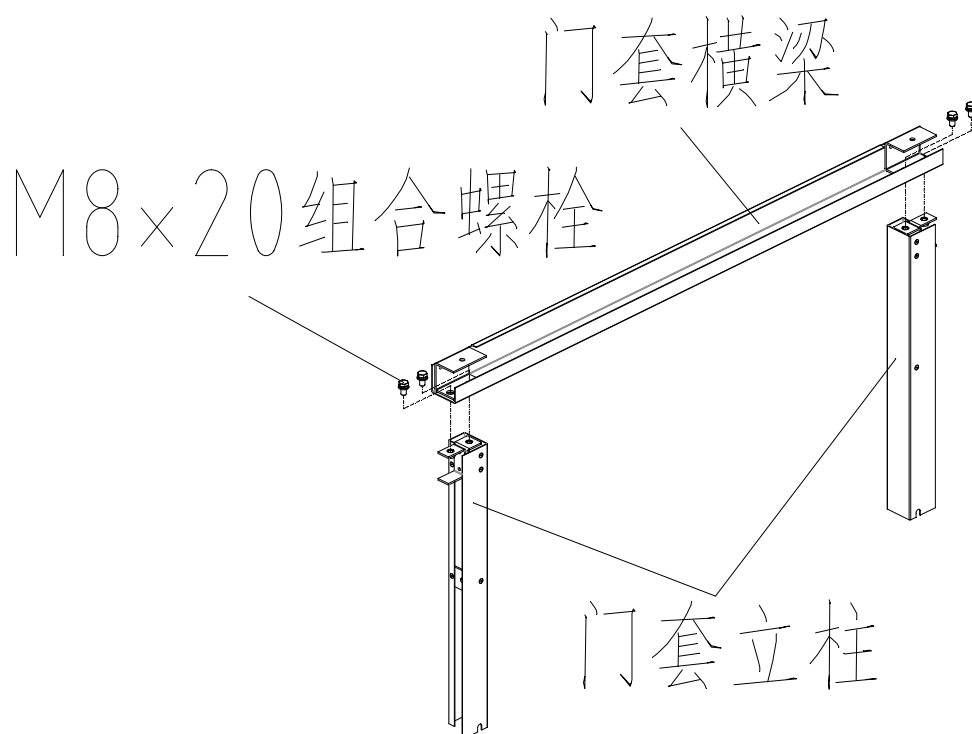

Center opening fireproof adiabatic landing door device installation manual

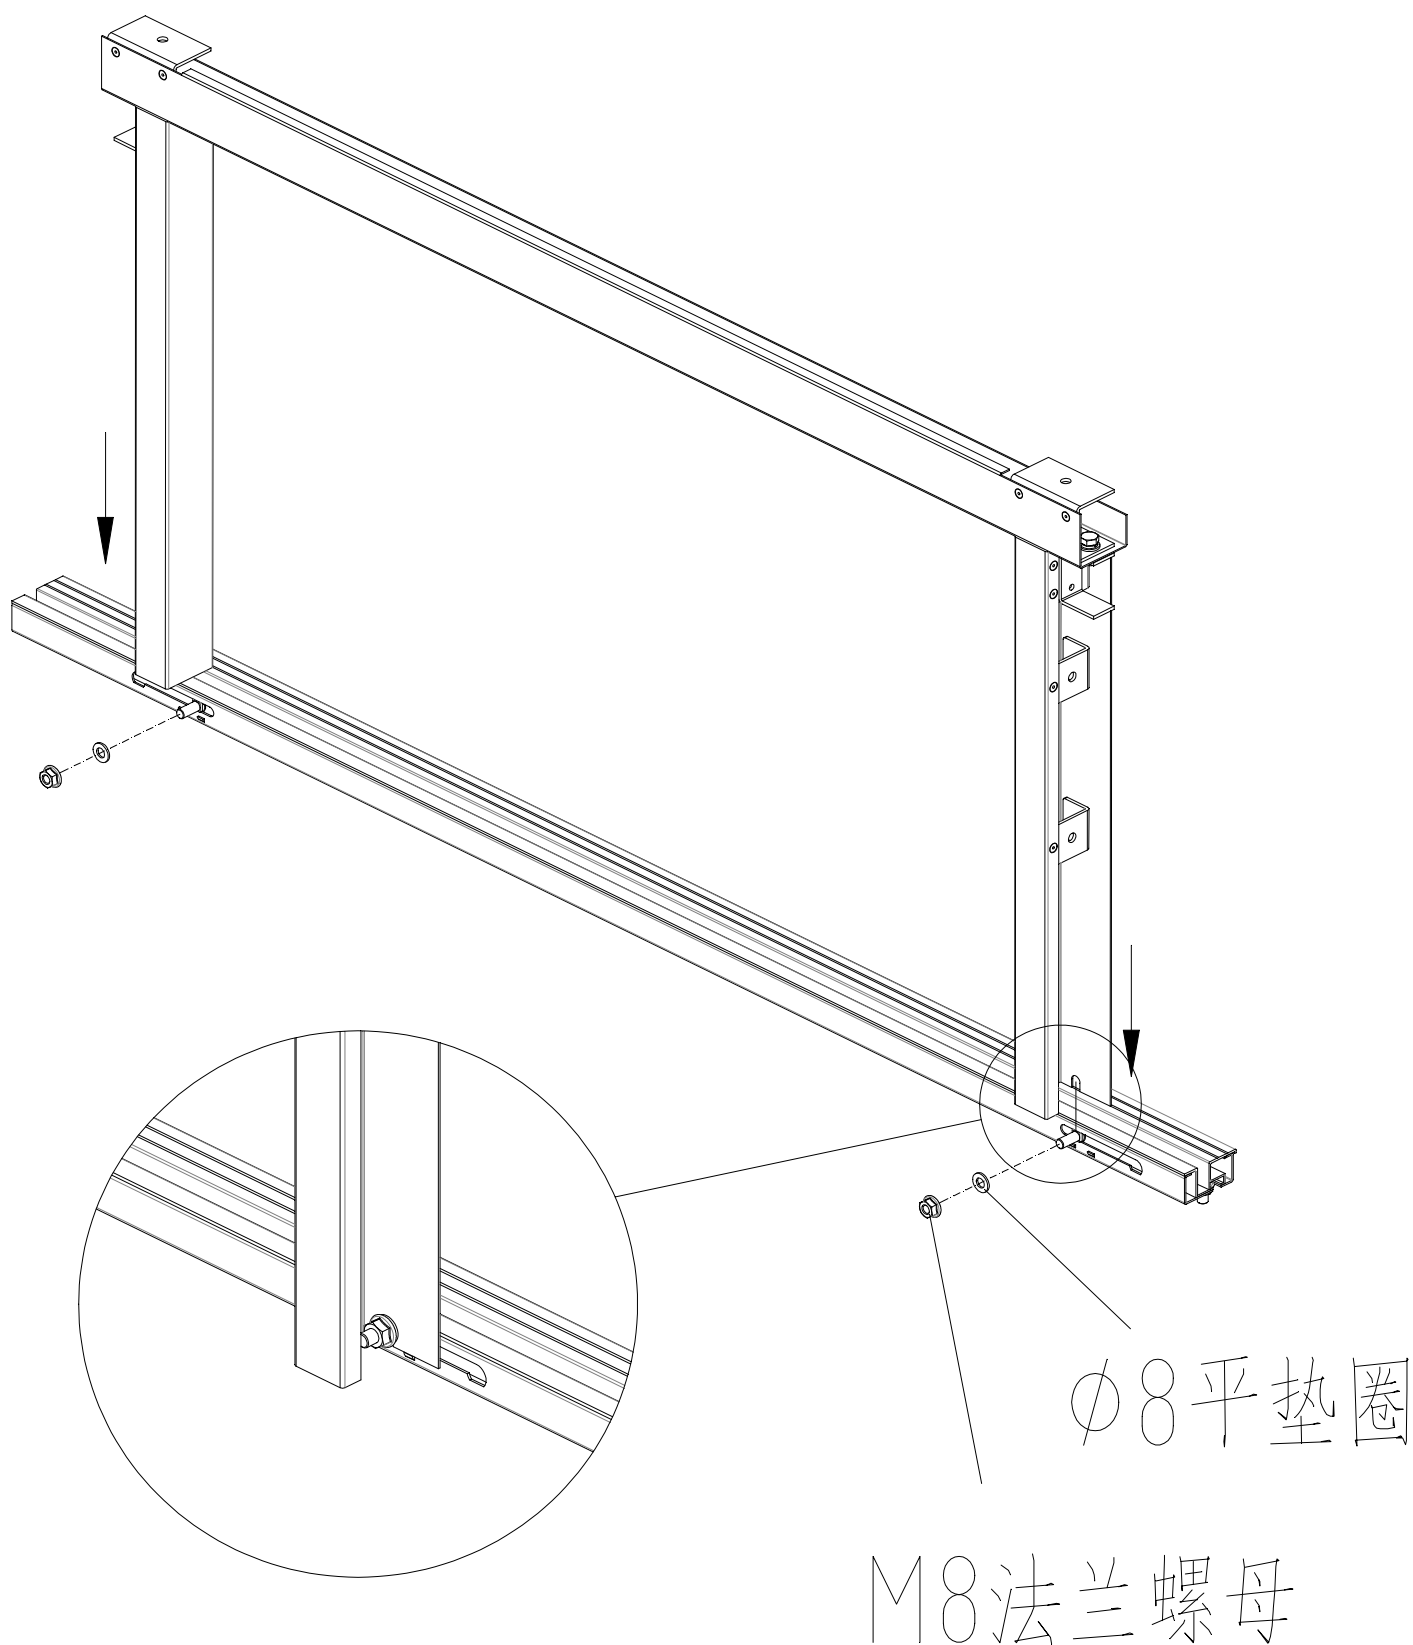


Center opening fireproof adiabatic landing door device installation manual

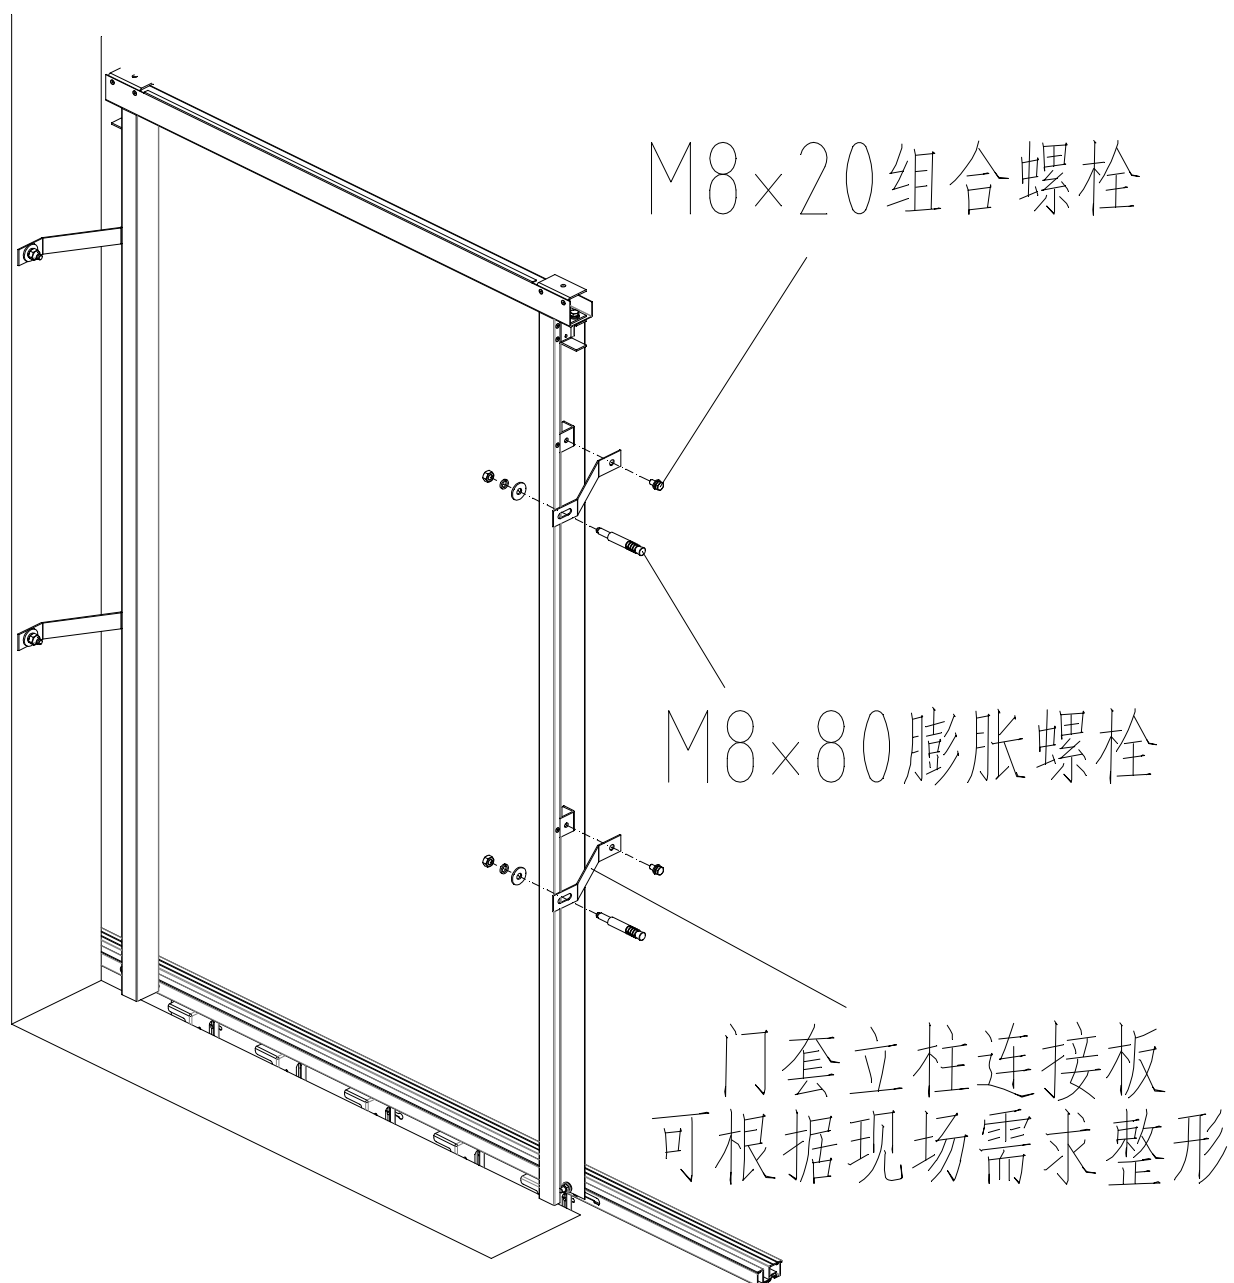

本图仅用于参考，门套跟墙体连接强度足够即可


Center opening fireproof adiabatic landing door device installation manual

Triangle lock installation:

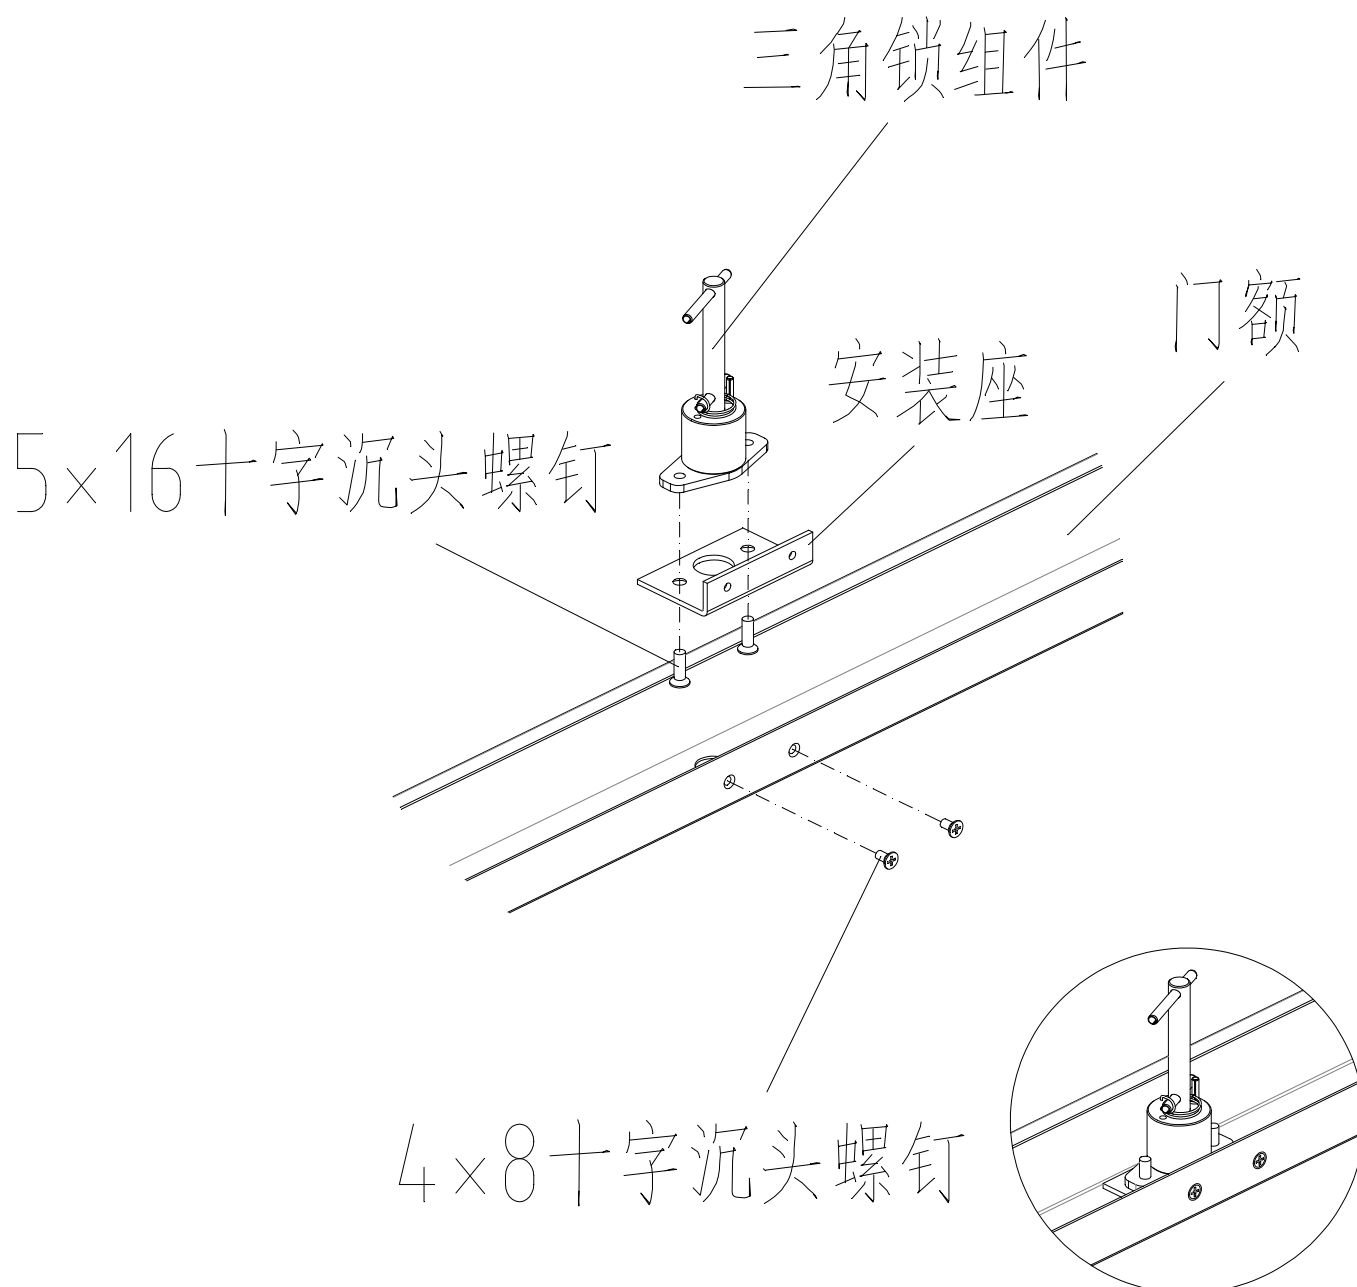


Center opening fireproof adiabatic landing door device installation manual


Suspension fixing parts installation:

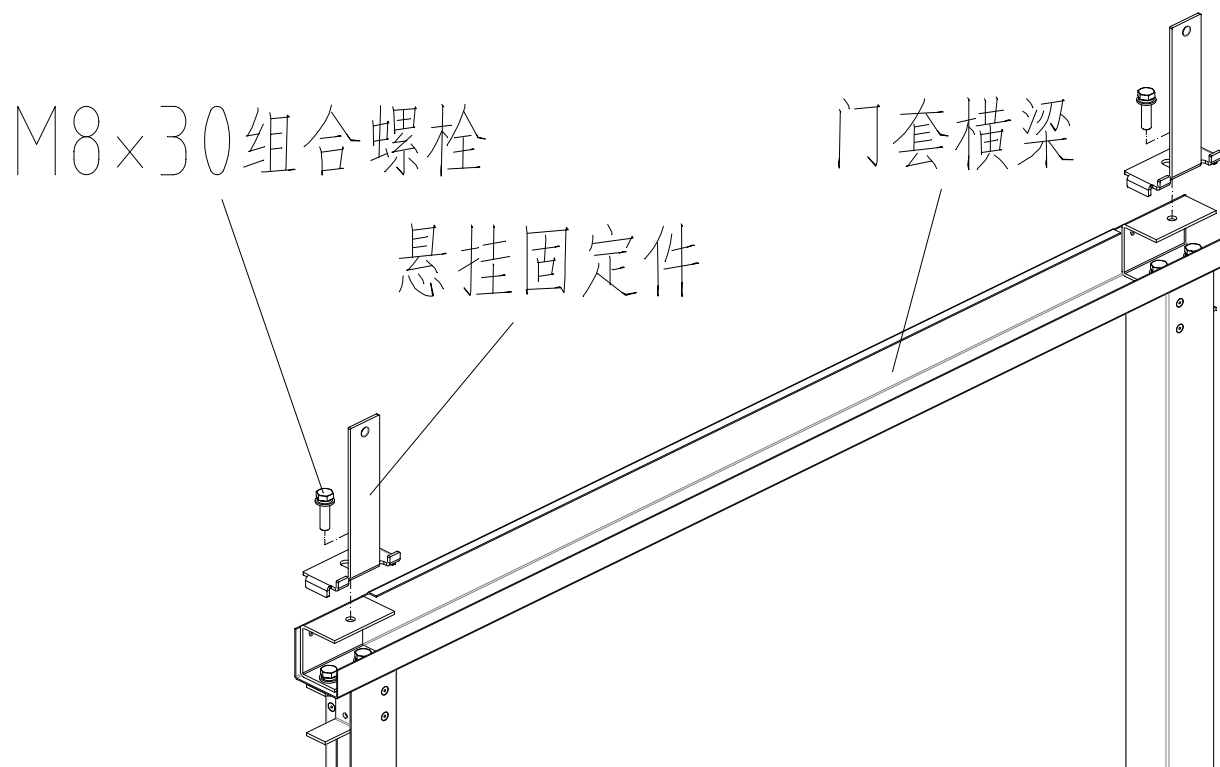

Center opening fireproof adiabatic landing door device installation manual

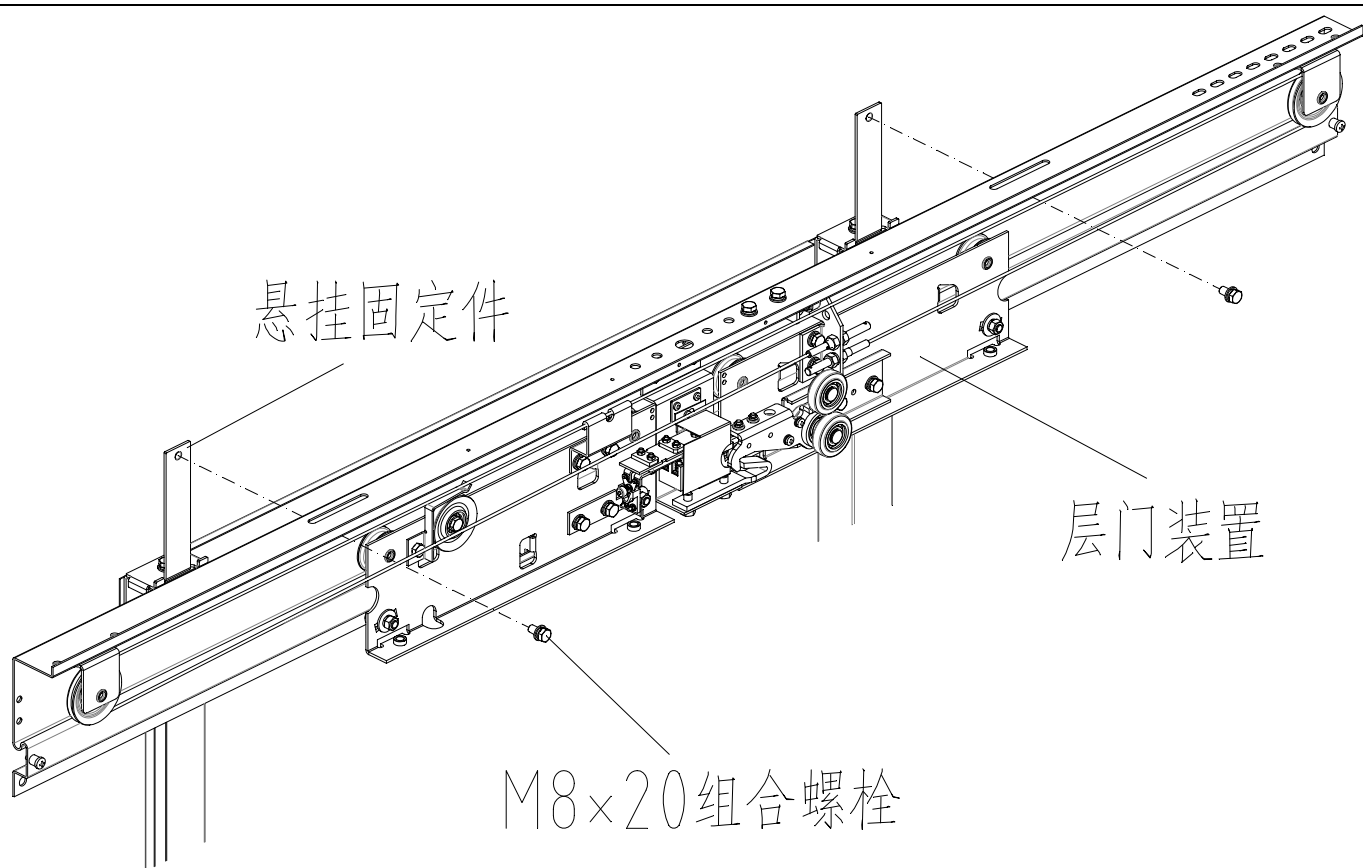

Center opening fireproof adiabatic landing door device installation manual

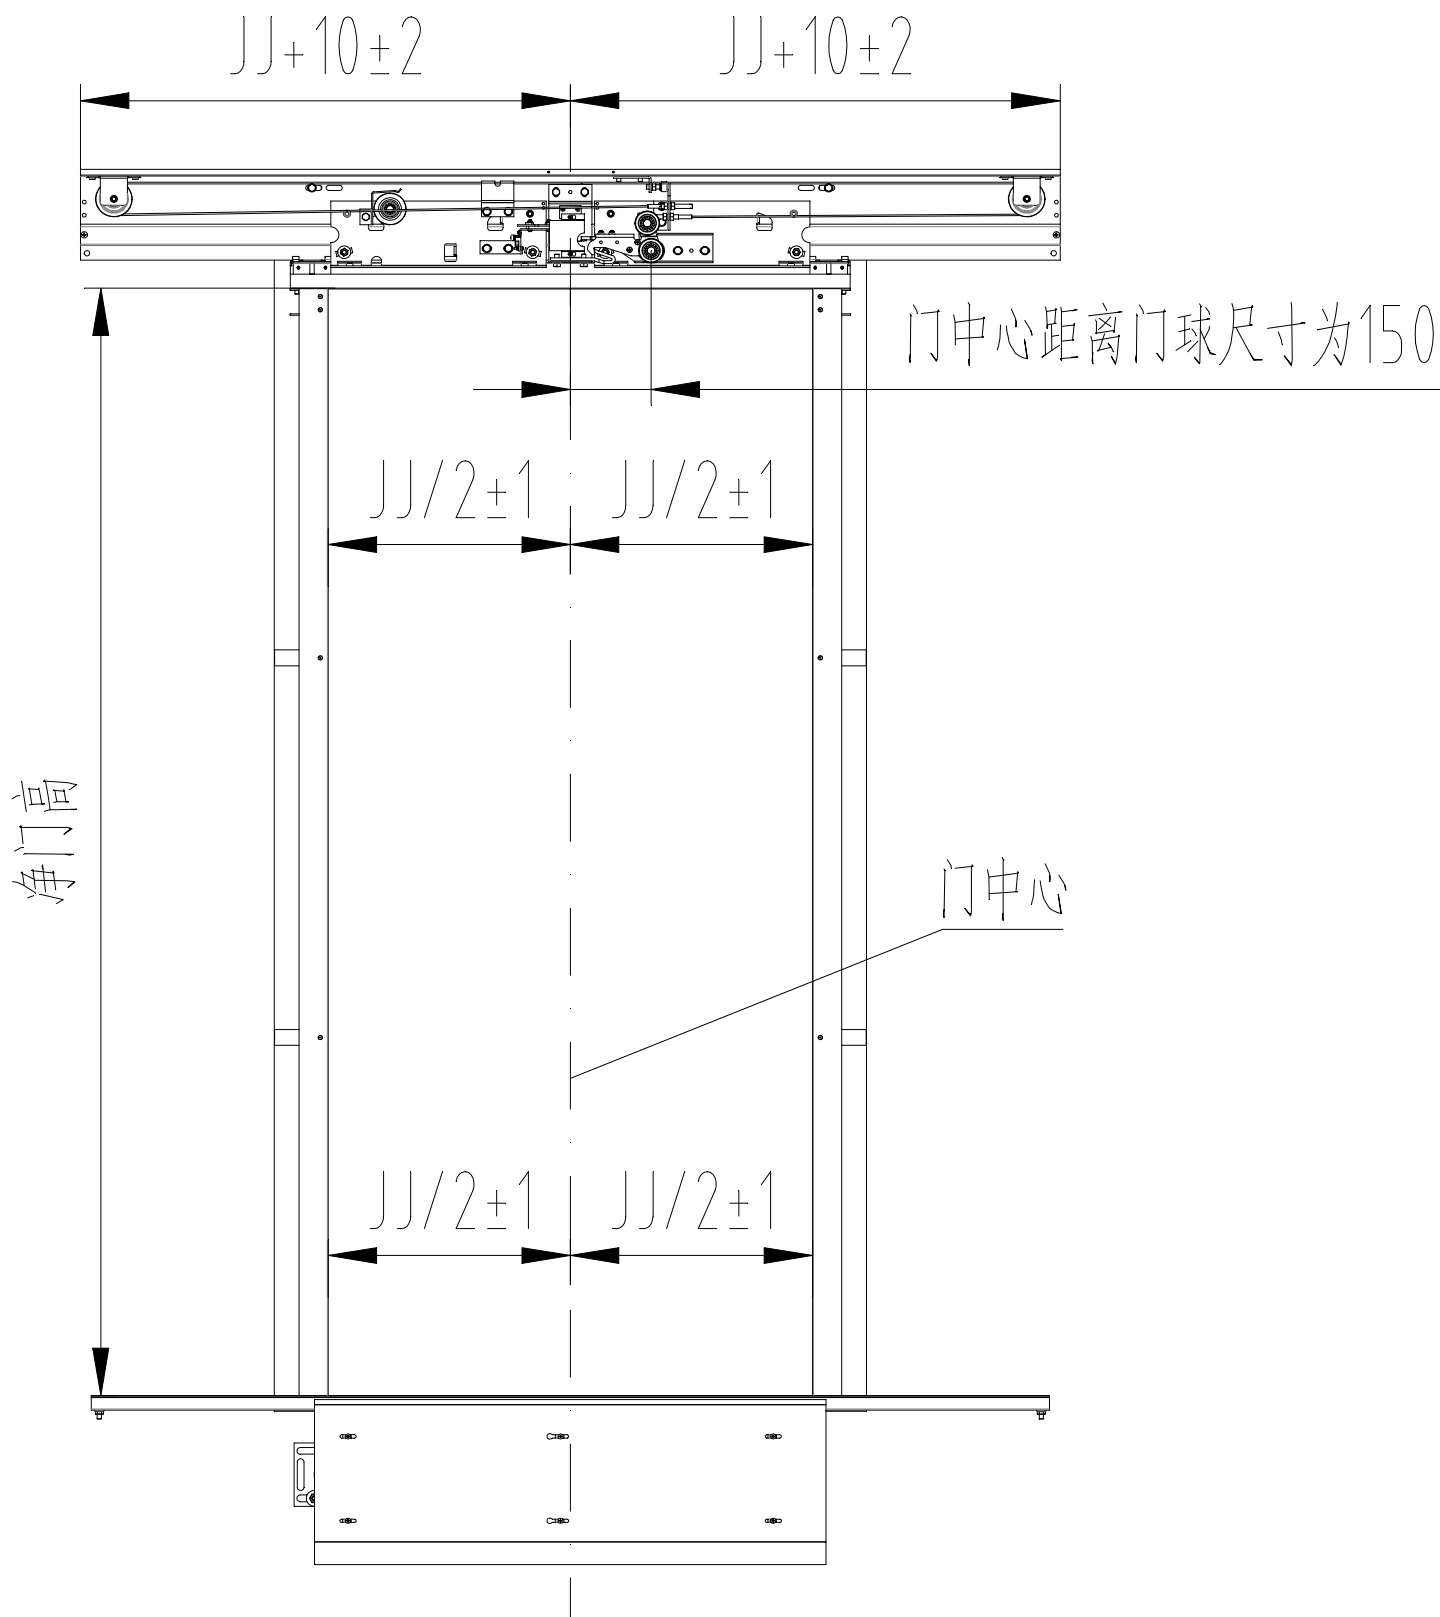


The base plate shall be parallel to the upper plane of the sill, and the door jamb column

Center opening fireproof adiabatic landing door device installation manual


shall be hung straight by a plumb bob.

Base plate bracket installation:

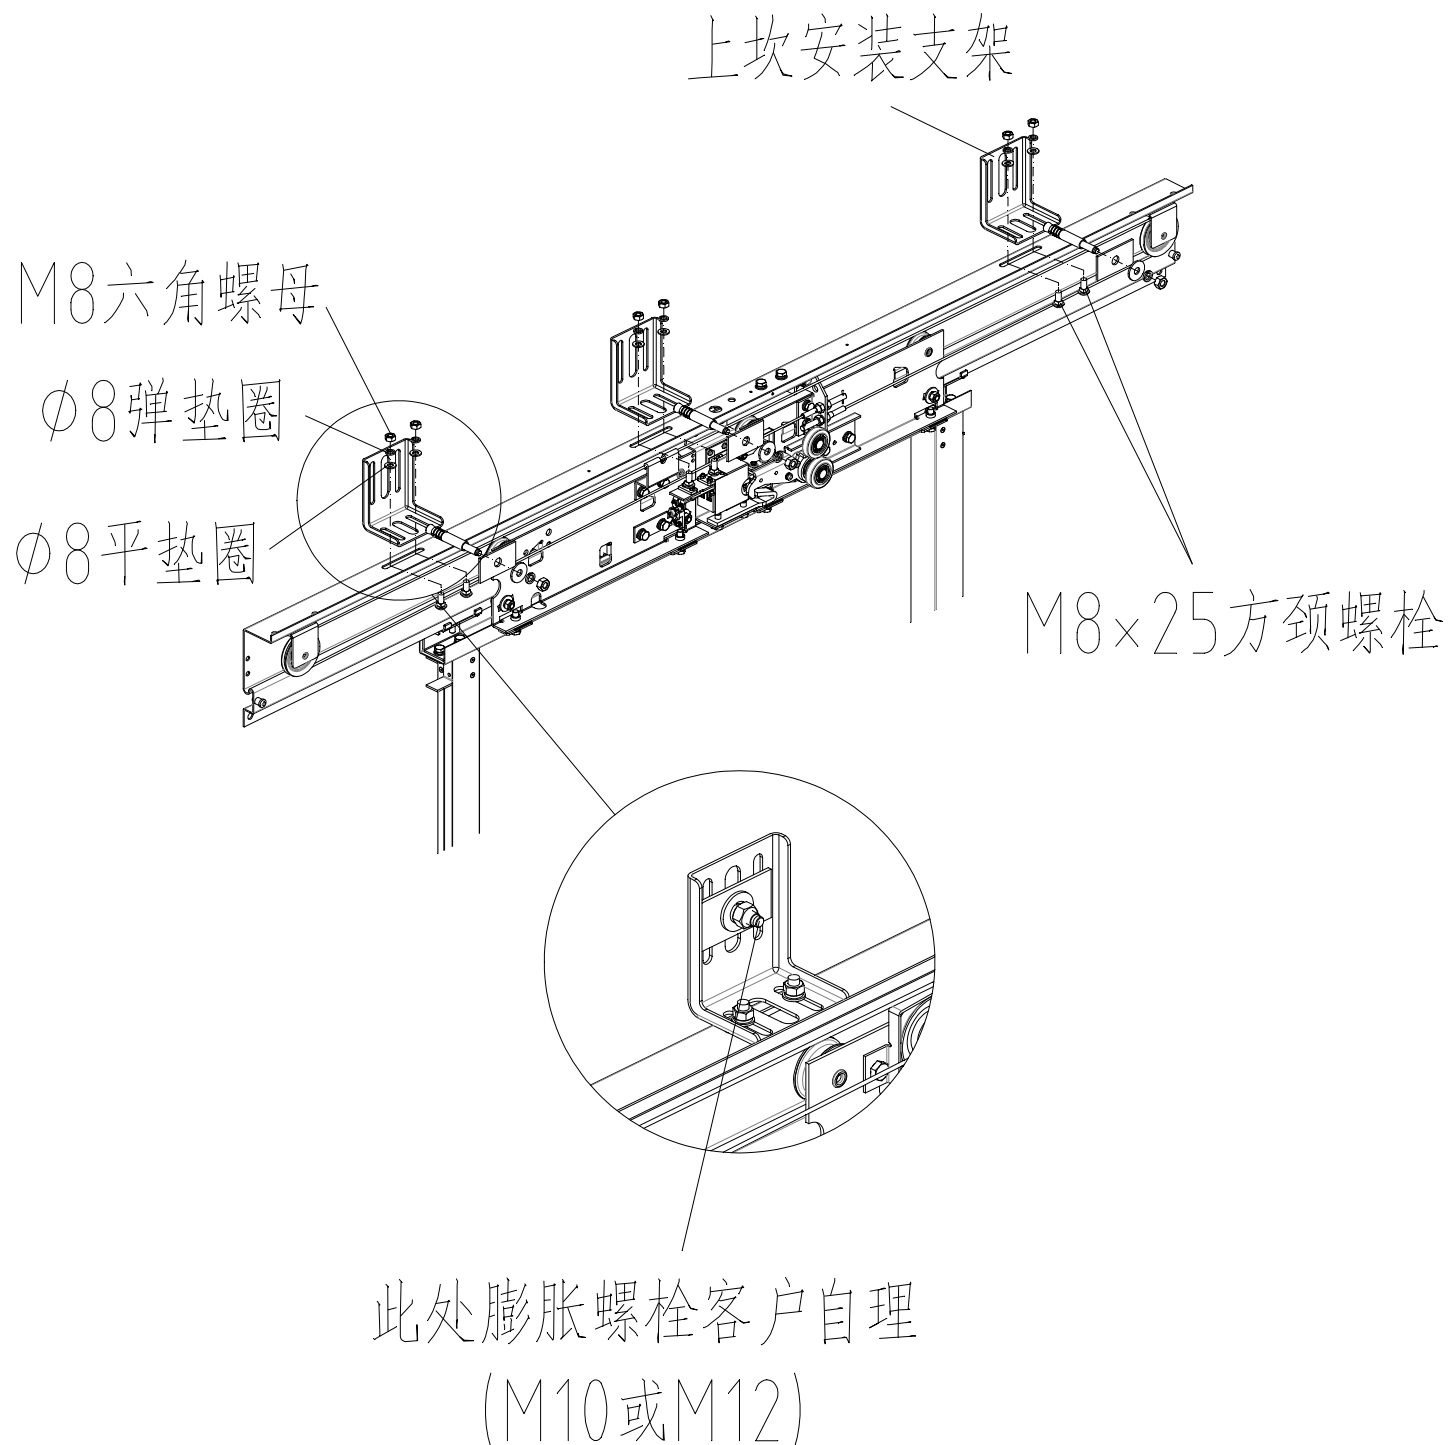


Center opening fireproof adiabatic landing door device installation manual

Door panel installation:

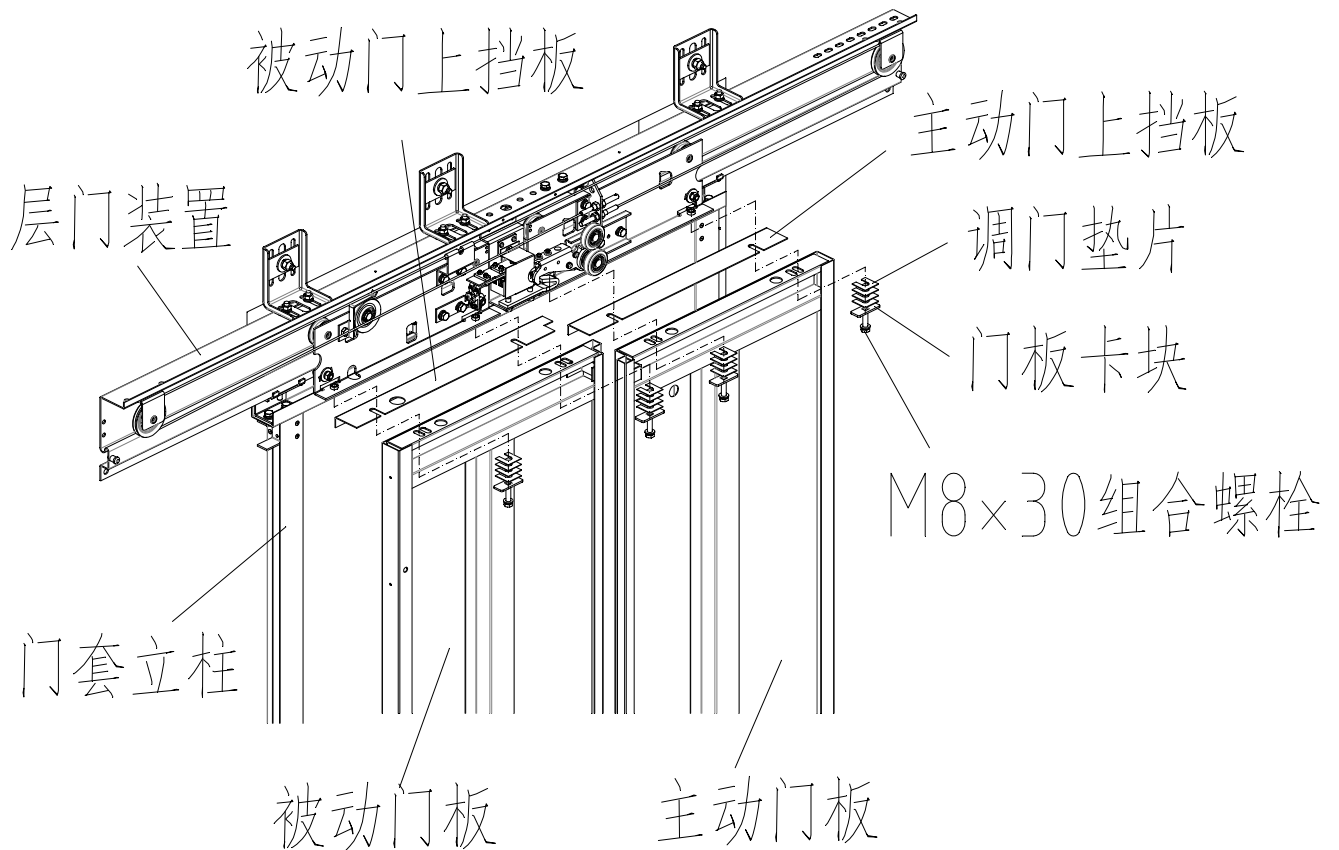


Door slider installation:

Center opening fireproof adiabatic landing door device installation manual

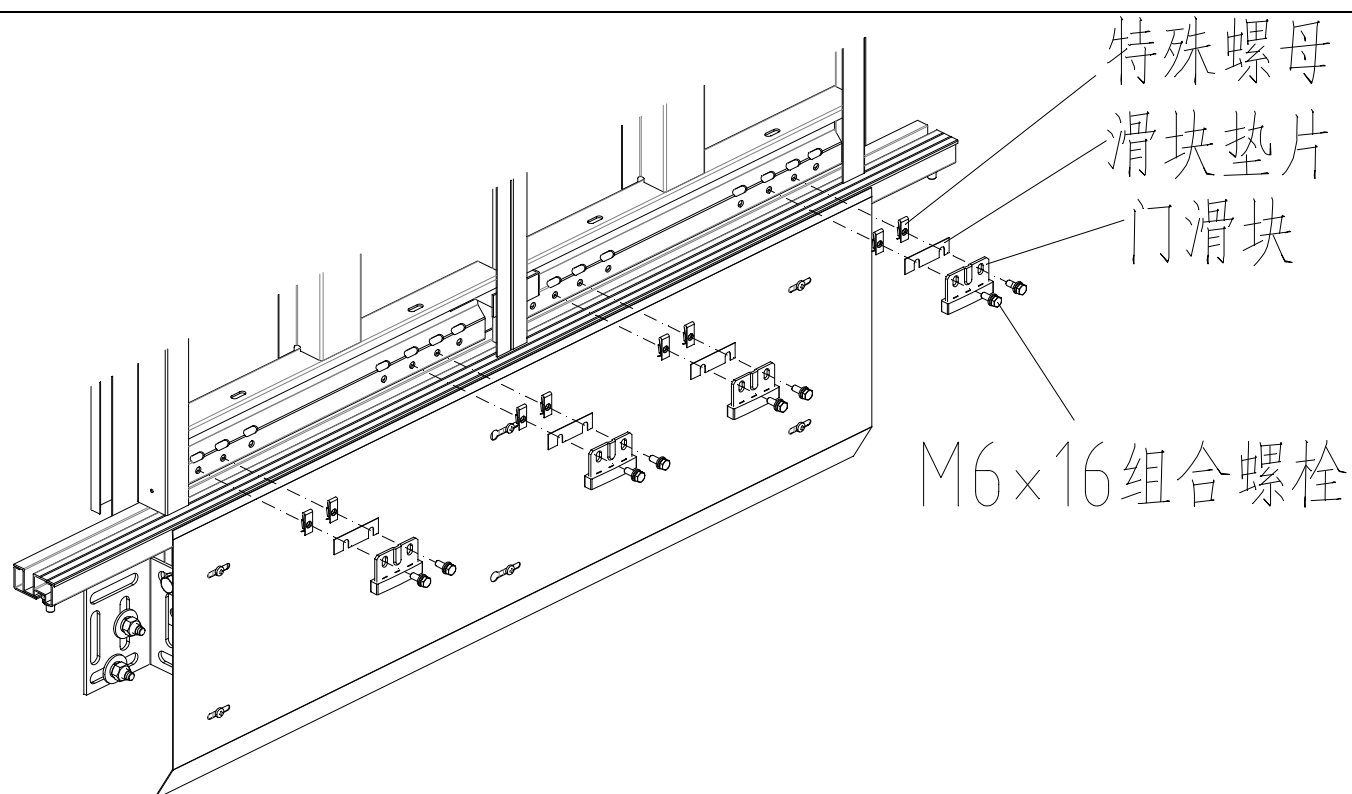


Side stop plate and lower stop plate installation:

Center opening fireproof adiabatic landing door device installation manual

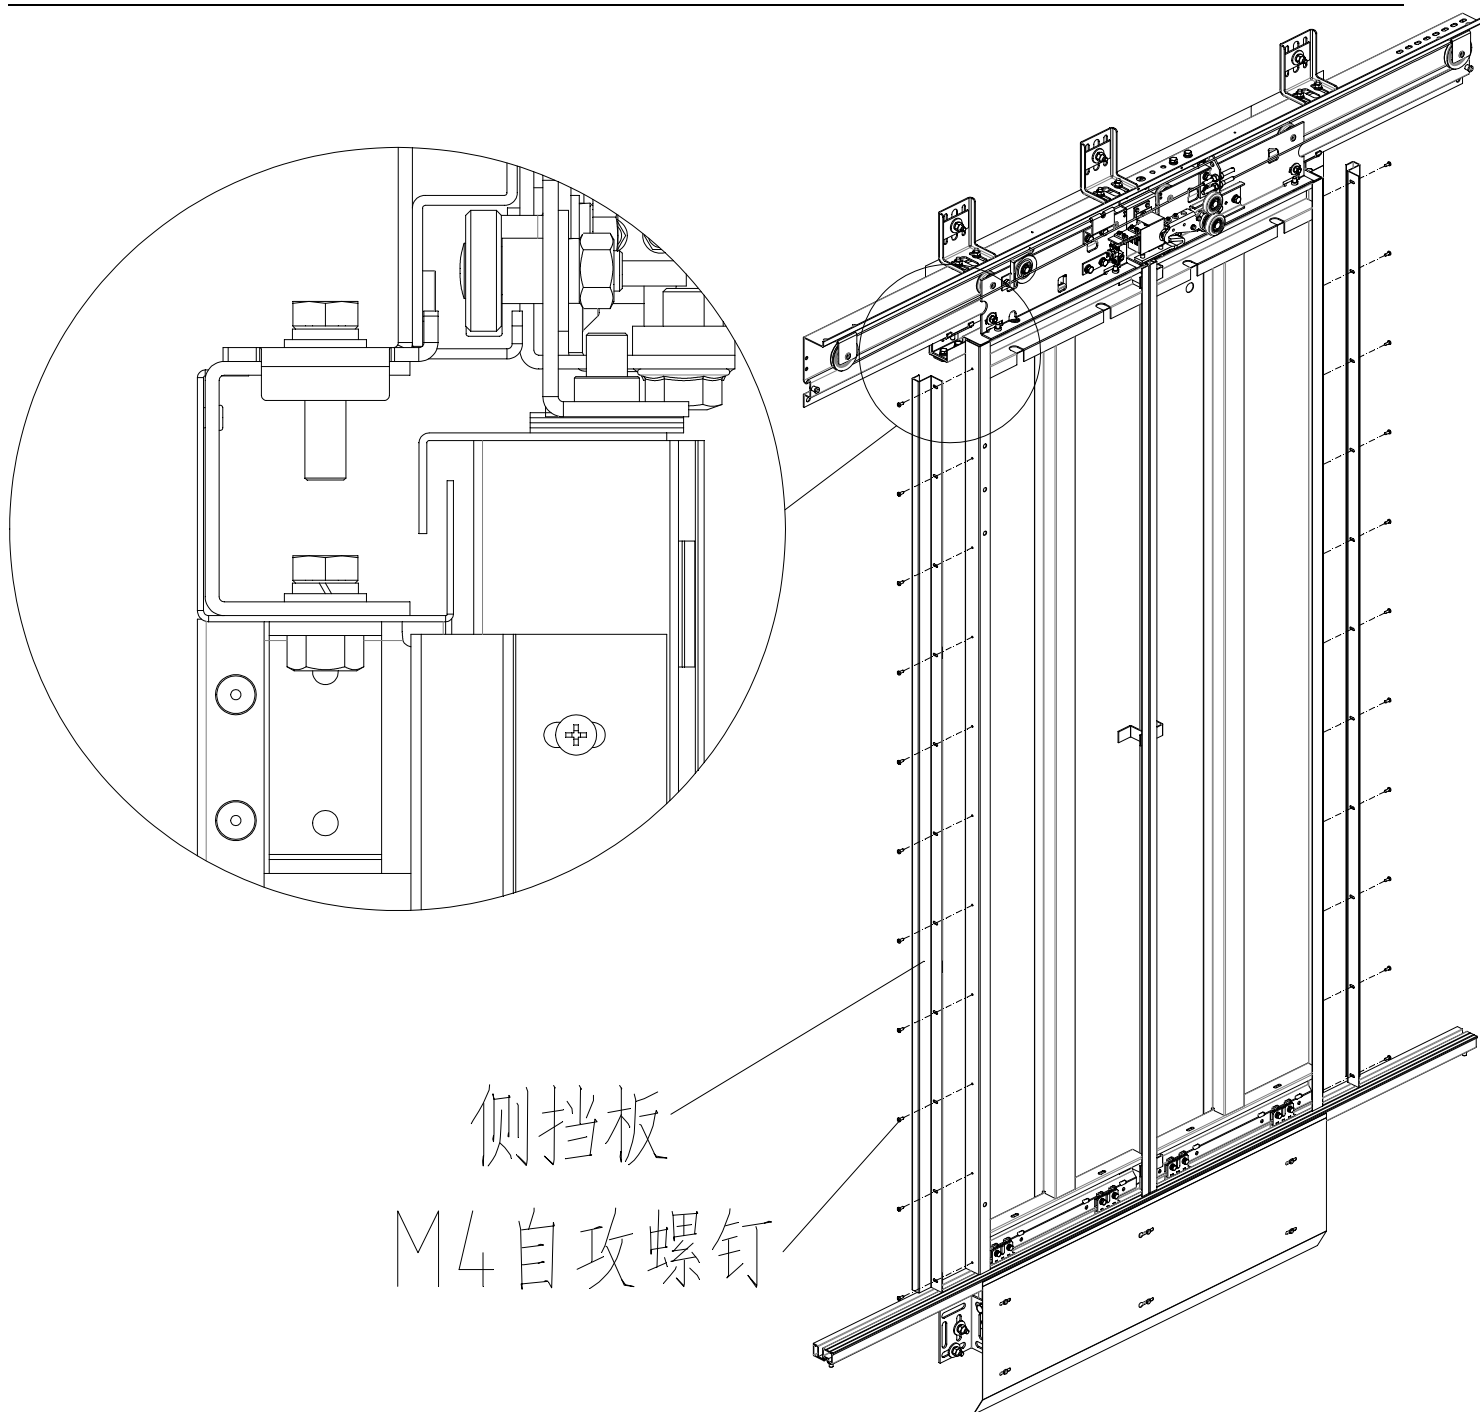

As shown in the figure above, the upper stop plate, side stop plate and door jamb overlap each other in a folding structure to meet the fire and smoke prevention requirements of the door panel. During the job-site installation, the clearance between the door panel and the upper stop plate and side stop plate of the door jamb, and the door jamb is 4mm.


Center opening fireproof adiabatic landing door device installation manual

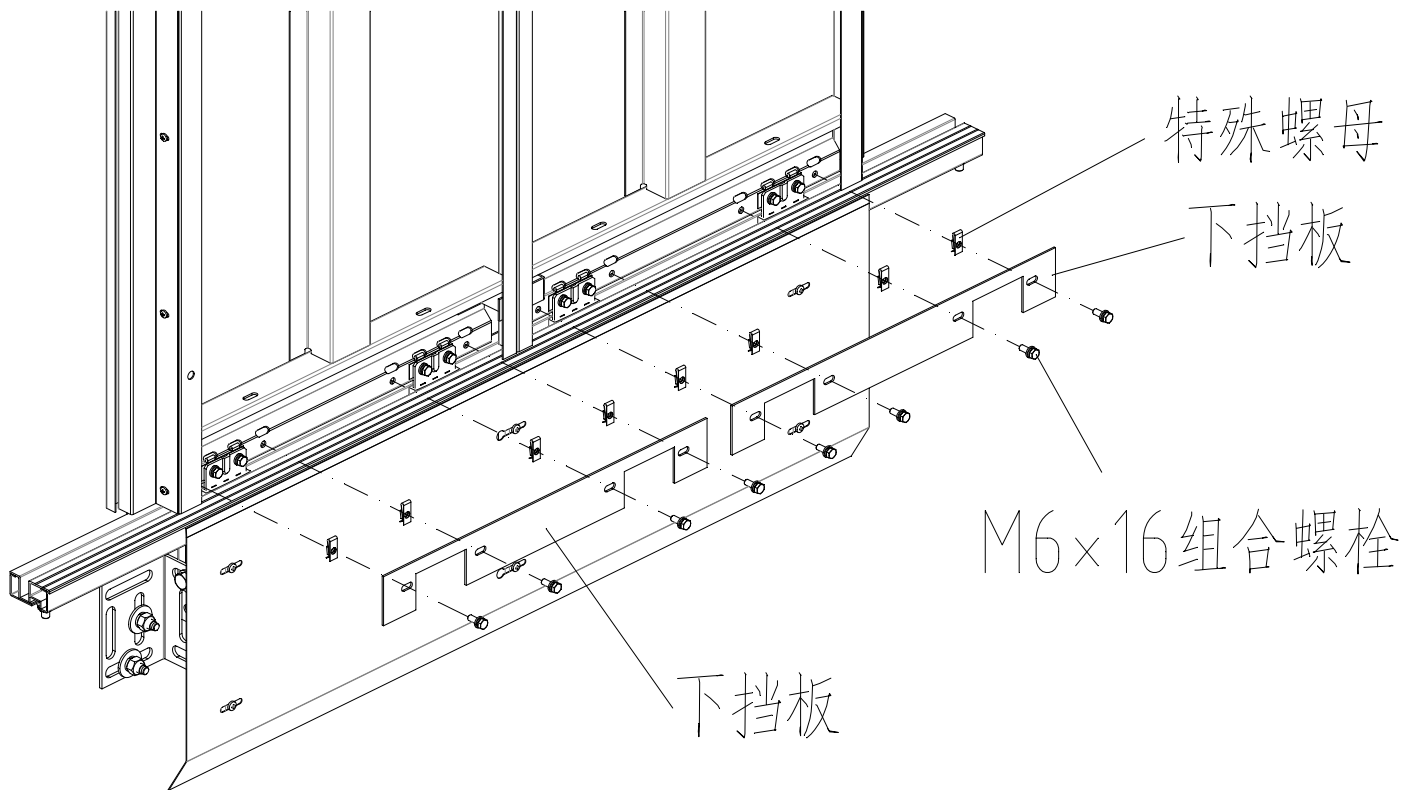


Common weight rope pulley module and guiding pipe
bracket installation:

Center opening fireproof adiabatic landing door device installation manual

重锤绳轮装置组件

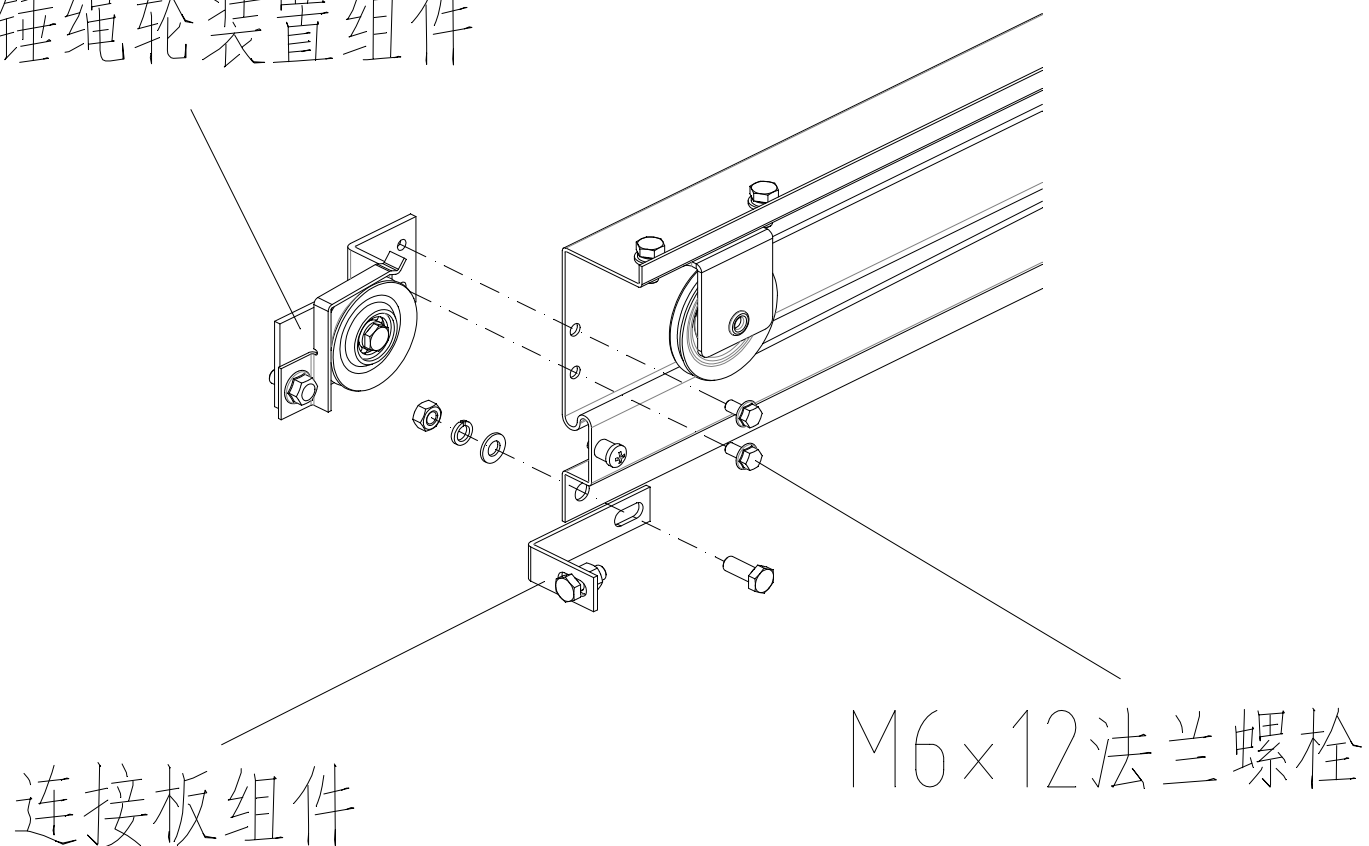


支撑架组件

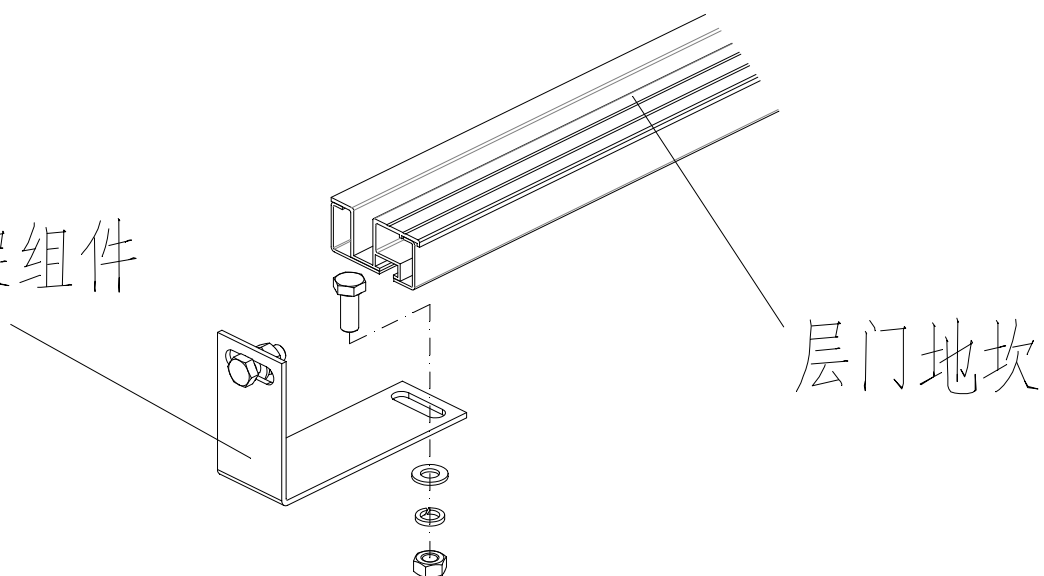


Guiding pipe installation:

Center opening fireproof adiabatic landing door device installation manual

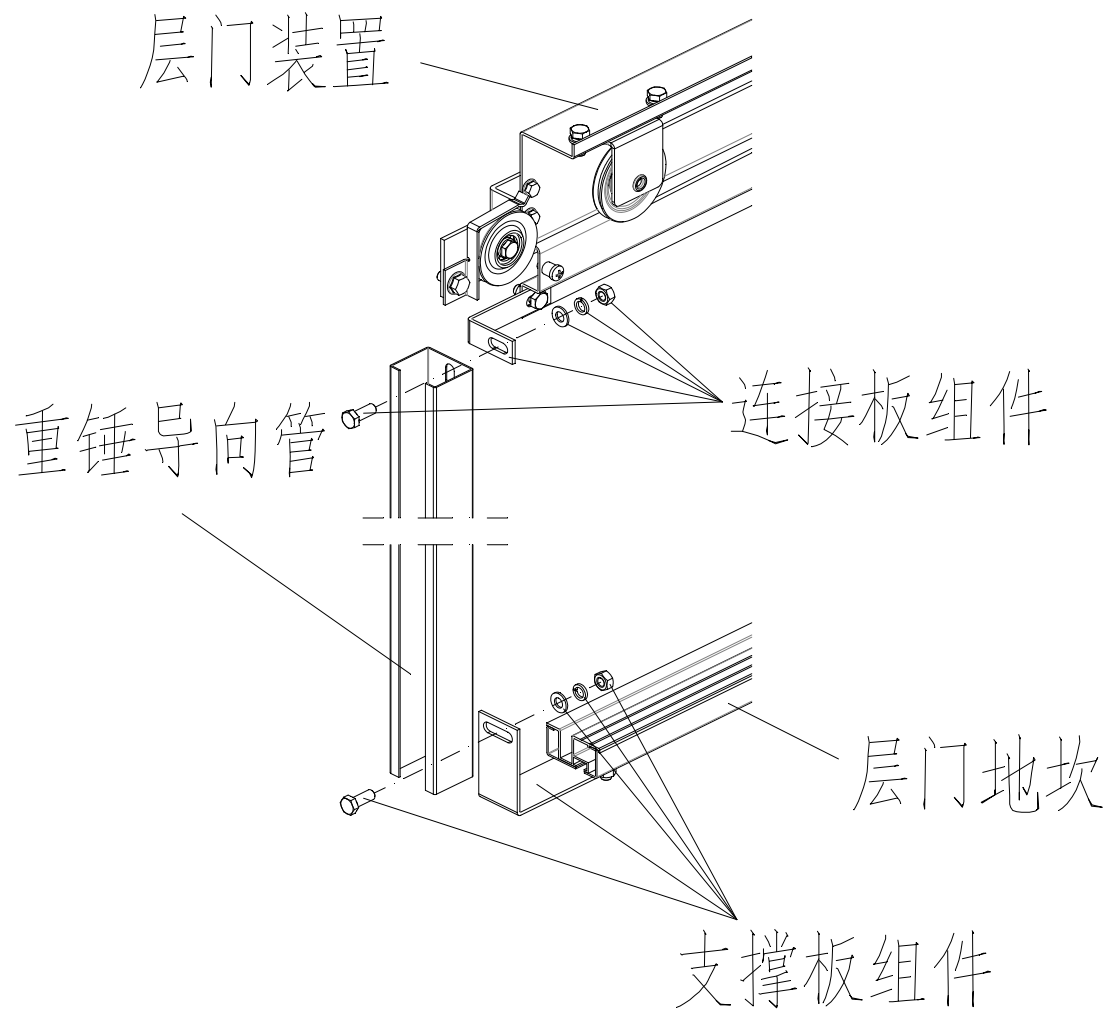

Common weight module installation:

Center opening fireproof adiabatic landing door device installation manual

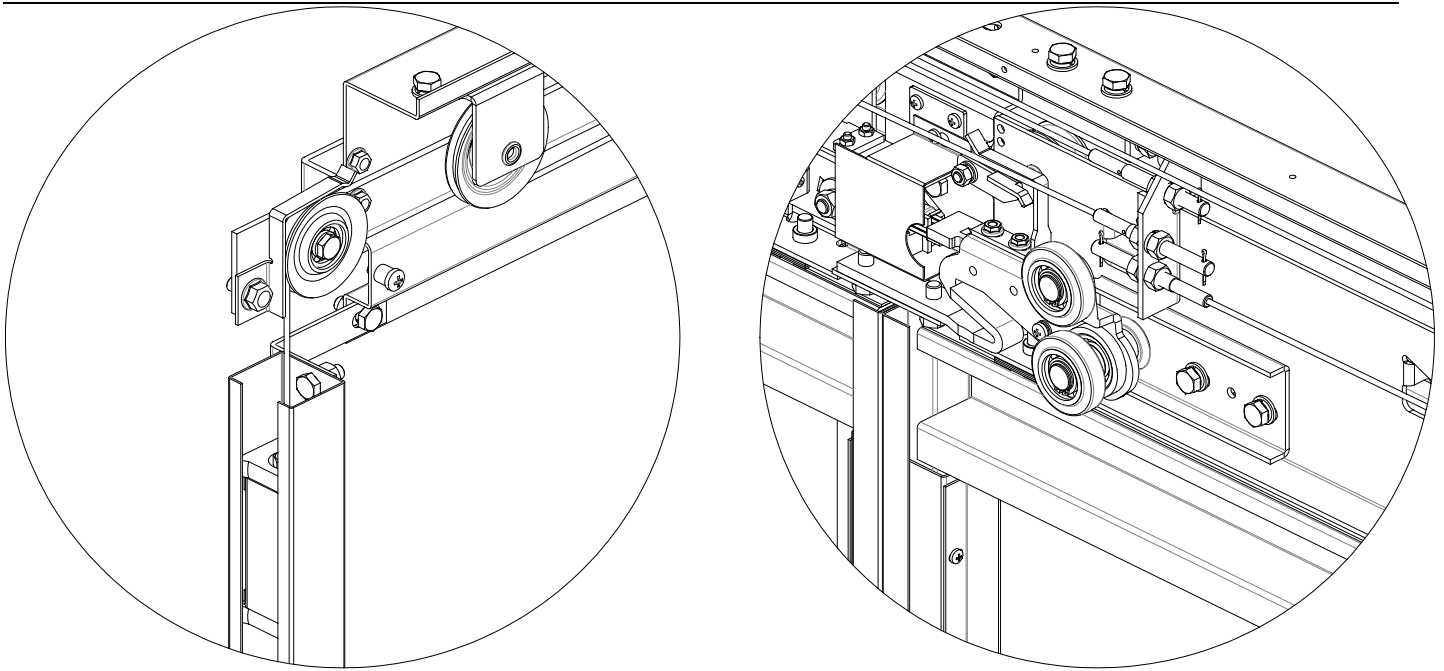

As shown in the figure: the hammer rod of the weight is correctly placed in the channel of the guiding pipe, the wire rope is passed around the weight rope pulley, the rope head is correctly inserted into the rope fastening bracket and the nut is tightened.

E N D